


VectorStar VectorStar

High Performance, Broadband Network Analysis Solutions

ME7838D4 4-Port Broadband Vector Network Analyzers

Broadband VNA System
Millimeter Waveguide VNA System

70 kHz to 145 (150) GHz 50 GHz to 1.1 THz

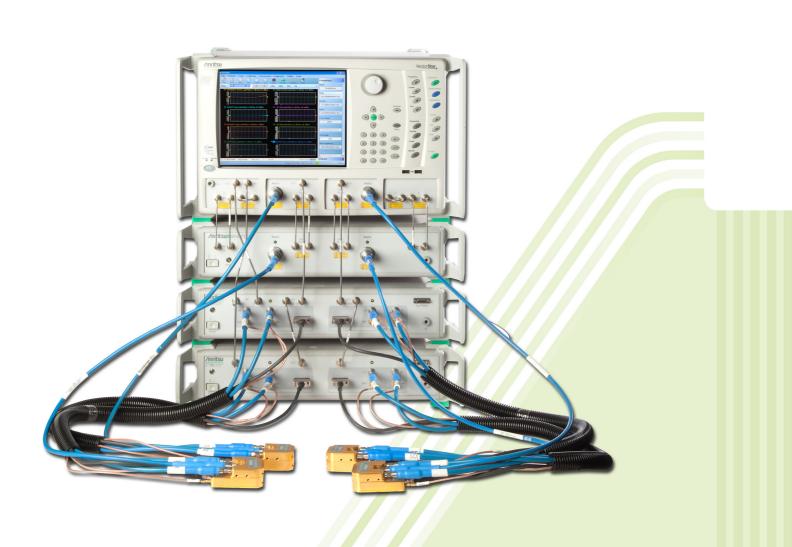

4-Port Broadband VNA System 70 kHz to 145 (150) GHz

The VectorStar ME7838D4 system incorporates the Anritsu millimeter-wave module utilizing Non Linear Transmission Line (NLTL) technology with single sweep 4-port coverage from 70 kHz to 145 GHz and provides:

- Industry-best broadband frequency coverage starts at 70 kHz instead of 10 MHz and is operational from 40 kHz to 150 GHz.
- Industry-best calibration and measurement stability 0.1 dB to 145 GHz vs 0.6 dB (to a lower maximum frequency) over 24
- Industry-best compact, lightweight mmWave modules for easy, precise, and economical positioning on the wafer probe • Kelvin bias tees for sense and force capabilities closely station - 0.6 vs 7.6 lb and 1/50 the volume.
- Thin film multipliers, receivers, and couplers at the test port, offering best raw directivity and providing excellent calibration and measurement stability.
- The industry's only available mmWave real time electronic power leveling – eliminates time-lagging software correction
 - Compatibility with all major probe stations.
 - positioned to the DUT.

4-Port Millimeter Waveguide VNA System 50 GHz to 1.1 THz

The ME7838D4 4-port millimeter-wave configuration provides waveguide output from 50 GHz to 1.1 THz in waveguide bands. The system can extend the broadband system or be configured to operate only as a waveguide system.

Broadband/Millimeter-Wave System Options

- MS4640B-002 Time Domain
- MS4640B-021 Universal Fixture Extraction
- MS464xB-031 Dual Source Architecture
- MS464xB-032 Internal RF Combiner
- MS4640B-035 IF Digitizer
- MS4640B-036 Extended IF Digitizer Memory
- MS4640B-041 Noise Figure
- MS4640B-042 PulseView™
- MS4640B-043 DifferentialView™
- MS4640B-044 IMDView™
- MS4640B-046 Fast CW
- MS4640B-047 Eye Diagram

- MS4640B-048 Differential Noise Figure
- MS4640B-049 Spectrum Analysis
- MS464xB-051 External VNA Direct Access Loops
- MS464xB-061 Active Measurement Suite, with 2 Attenuators
- MS464xB-062 Active Measurement Suite, with 4 Attenuators
- 3744A-Rx 30 to 110 GHz mmWave Receiver for Noise Figure and mmWave Antenna Measurements
- 3744A-EE 56 to 95 GHz WR-12 Waveguide Module
- 3744A-EW 65 to 110 GHz WR-10 Waveguide Module
- SC8215 and SC7287 Kelvin Bias Tees
- 3743A 125 GHz Broadband mmWave Module

A detailed color brochure available on the Anritsu web site provides descriptions and examples of the VectorStar family's features and benefits:

https://www.anritsu.com/test-measurement/products/ms4640b-series

4-Port Broadband Character Specifications for Waveguide ME7838D4 with Option 41/4 VectorStar ME7838D4 Waveg Standard Capabilities for All Mechanical and Environmen Regulatory Compliance Warranty Calibration and Correction C Mechanical Calibration/Verif Test Port Cables	.
Definitions	All specifications and characteristics apply under the following conditions, unless otherwise stated:
Warm-Up Time	After 90 minutes of warm-up time, where the instrument is left in the ON state.
Temperature Range	Over the 25 °C ± 5 °C temperature range.
Error-Corrected Specifications	For error-corrected specifications, over 23 °C ± 3 °C, with < 1 °C variation from calibration temperature.
	For error-corrected specifications are warranted and include guard bands, unless otherwise stated.
Typical Performance	"Typical" specifications describe expected, but not warranted, performance based on sample testing. Typical performance indicates the measured performance of an average unit and do not guarantee the performance of any individual product. "Typical" specifications do not account for measurement uncertainty and are shown in parenthesis, such as (-102 dB), or noted as Typical.
User Cables/Adapters	Specifications do not include effects of any user cables, adapters, fixtures or other structures attached to the instrument.
Discrete Spurious Responses	Specifications may exclude discrete spurious responses.
Internal Reference Signal	All specifications apply with internal 10 MHz Crystal Oscillator Reference Signal.
Characteristic Performance	Characteristic performance indicates a performance designed-in and verified during the design phase. It does include guard-bands and is not covered by the product warranty.
Below 300 kHz	All uncertainties below 300 kHz are typical.
Recommended Calibration Cycle	12 months
Interpolation Mode	All specifications are with Interpolation Mode Off.
Specifications Subject to Change	All specifications subject to change without notice. For the most current data sheet, please visit the Anritsu web site: www.anritsu.com
Patents	The instrument may be protected by one or more of the following patents: 6894581, 7088111, 7545151, 7683633, 7924024, 8185078, 8306134, 8417189, 8718586, 9103873, 9606212, 9753071, 10225073, 10778592, 10225073 depending on the model and option configuration of the instrument.

4-Port Broadband Characteristics

ME7838D4 4-Port Broadband Hardware Configuration

The ME7838D4 4-port broadband VNA system provides single sweep coverage from 70 kHz to 145 GHz and is operational from 40 kHz to 150 GHz. It consists of the following items:

Broadband VNA ME7838D Broadband VNA System with Options 51, 61, or 62

4-Port Test Set MN4697C 2U 4-Port Test Set

mmWave Modules MA25300A Millimeter-Wave Modules, 2 each (two incremental to the modules in the ME7838D)

Test Set 3736B Broadband Test Set with Cables
Test Set 3739C Broadband Test Set with Cables

ME7838D4 Broadband/Millimeter-Wave System Options

The major ME7838D4 4-port broadband VNA system options are:

Option 2 MS4640B-002 - Time Domain

Option 21 MS4640B-021 – Universal Fixture Extraction
Option 31 MS464xB-031 – Dual Source Architecture
Option 32 MS464xB-032 – Internal RF Combiner

Option 35 MS4640B-035 - IF Digitizer

Option 36 MS4640B-036 – Extended IF Digitizer Memory

 Option 41
 MS4640B-041 – Noise Figure

 Option 42
 MS4640B-042 – PulseView™

 Option 43
 MS4640B-043 – DifferentialView™

 Option 44
 MS4640B-044 – IMDView™

 Option 46
 MS4640B-046 – Fast CW

 Option 47
 MS4640B-047 – Eye Diagram

Option 47 MS4640B-047 – Eye Diagram

Option 48 MS4640B-048 – Differential Noise Figure
Option 49 MS4640B-049 – Spectrum Analysis

Option 51 MS464xB-051 – External VNA Direct Access Loops

Option 61 MS464xB-061 – Active Measurement Suite, with 2 Attenuators
Option 62 MS464xB-062 – Active Measurement Suite, with 4 Attenuators

Bias Tees SC8215 and SC7287 - Kelvin Bias Tees

System and Receiver Dynamic Range, Noise Floor (Excludes localized spurious responses and crosstalk)

System Dynamic Range System dynamic range is measured as the difference between maximum port power and the RMS noise

floor in a 10 Hz bandwidth and no averaging (ports terminated).

Noise Floor Noise floor is calculated as the difference between maximum rated port power and system dynamic range.

Receiver Dynamic Range Receiver Dynamic Range is calculated as the difference between the receiver compression level and the

noise floor at the appropriate port.

Normalizing Measurement

Normalizing measurement made with a through line connection, with its effects compensated for. The cables between the VNA and the MA25300A modules are assumed to be the 806-206-R 1.85 mm cable (61 cm, 24 in long) or the 806-209-R 1.85 mm cable (91.5 cm, 36 in long). All values are typical.

	System Dynan	tem Dynamic Range (dB) ^{a,b} Receiver Dynamic Range (dB) ^a Noise Floor		Receiver Dynamic Range (dB) ^a		or (dBm) ^a
Frequency (GHz)	ME7838D4 Option 51	ME7838D4 Option 31/51	ME7838D4 Option 51	ME7838D4 Option 62	ME7838D4 Option 51	ME7838D4 Option 62
70 kHz to 300 kHz	76	78	78	79	-72	-73
> 0.3 to 2 MHz	86	88	94	94	-82	-81
> 2 to 10 MHz	100	102	106	105	-94	-92
> 0.01 to < 2.5	111	115	115	115	-103	-101
2.5 to 24	96	97	114	114	-102	-100
> 24 to 54	90	91	114	113	-104	-103
> 54 to 60	110	110	124	124	-114	-114
> 60 to 67	110	110	123	123	-113	-113
> 67 to 80	108	108	121	121	-111	-111
> 80 to 85	106	106	123	123	-113	-113
> 85 to 90	106	106	122	122	-112	-112
> 90 to 95	106	106	121	121	-111	-111
> 95 to 105	106	106	121	121	-111	-111
> 105 to 110	109	109	125	125	-115	-115
> 110 to 120	108	108	118	118	-111	-111
> 120 to 125	104	104	116	116	-109	-109
> 125 to 140	92	92	109	109	-102	-102
> 140 to 145	94	94	107	107	-100	-100
> 145 to 150 ^c	94	94	107	107	-100	-100

a. Excludes localized spurious responses and crosstalk.

c. 145 to 150 GHz available as operational.

b. Table represents dynamic range with Ports 1 and/or 3 driving. With Port 2 driving, dynamic range may be up to 4 dB lower in the 2.5-54 GHz band. With Port 4 driving, dynamic range may be up to 3 dB higher in the 24-54 GHz band.

Test Port Power

Port power control is provided by the base VNA for frequencies below 54 GHz, and by the MA25300A mmWave module for frequencies greater than 54 GHz. Port Power and Power Range tables represent powers available at Ports 1 and 3. Max Power may be up to 4 dB lower on Port 2 in the 24 GHz to 54 GHz band (only for Option 31 systems). Max Power may be up to 3 dB higher on Port 4 in the 24 GHz to 54 GHz band. All values typical.

	Port Power ^a			ower ^a al Source Architecture
Frequency (GHz)	Max Power ME7838D4 Option 51	Max Power ME7838D4 Option 62	Max Power ME7838D4 Option 31/51	Max Power ME7838D4 Option 31/62
70 kHz to 300 kHz	4	6	6	8
> 0.3 to 2 MHz	4	6	6	8
> 2 to 10 MHz	6	6	8	8
> 0.01 to < 2.5	8	6	12	10
2.5 to 24	-6	-8	-5	-7
> 24 to 54	-14	-16	-13	-15
> 54 to 60	-4	-4	-4	-4
> 60 to 67	-3	-3	-3	-3
> 67 to 80	-3	-3	-3	-3
> 80 to 85	-7	-7	-7	-7
> 85 to 90	-6	-6	-6	-6
> 90 to 95	-5	-5	-5	-5
> 95 to 105	-5	-5	-5	-5
> 105 to 110	-6	-6	-6	-6
> 110 to 120	-3	-3	-3	-3
> 120 to 125	-5	-5	-5	-5
> 125 to 140	-10	-10	-10	-10
> 140 to 145	-6	-6	-6	-6
> 145 to 150 ^b	-6	-6	-6	-6

a. Using the 806-206-R 1.85 mm (61 cm, 24 in long) test port cables between the VNA and the MA25300A mmWave modules.

Power Range, Accuracy, Linearity, and Resolution

Accuracy is defined at –10 dBm or max rated power, whichever is lower. Linearity is defined as the incremental error between the accuracy test power level and 5 dB below. A user power calibration is advised for optimum power accuracy. Typical.

Range		Range (dB) Accuracy		Linearity	Resolution
Frequency (GHz)	ME7838D4 Option 51	ME7838D4 Option 62	(dB) ^a	(dB)	(dB)
70 kHz to 300 kHz	4 to -25	6 to -85	±1.5	±1.5	0.01
> 0.3 to 2 MHz	4 to -25	6 to -85	±1.5	±1.5	0.01
> 2 to 10 MHz	6 to -25	6 to -85	±1.5	±1.5	0.01
> 0.01 to < 2.5 GHz	8 to -25	6 to -85	±1.0	±1.0	0.01
2.5 to 24 GHz	-6 to -25	-8 to -85	±1.0	±1.0	0.01
> 24 to 54 GHz	-14 to -30	-16 to -90	±1.5	±1.0	0.01
> 54 to 60 GHz	-4 to -55	-4 to -55	±2.0	±1.5	0.01
> 60 to 67 GHz	-3 to -55	-3 to -55	±2.0	±1.5	0.01
> 67 to 80 GHz	-3 to -55	-3 to -55	±2.0	±1.5	0.01
> 80 to 85 GHz	-7 to -55	-7 to -55	±2.0	±1.5	0.01
> 85 to 90 GHz	-6 to -55	-6 to -55	±2.0	±1.5	0.01
> 90 to 95 GHz	-5 to -55	-5 to -55	±2.0	±1.5	0.01
> 95 to 105 GHz	-5 to -55	-5 to -55	±3.0	±2.0	0.01
> 105 to 110 GHz	-6 to -55	-6 to -55	±3.0	±2.0	0.01
> 110 to 120 GHz	-3 to -55	-3 to -55	±4.0	±3.0	0.01
> 120 to 125 GHz	-5 to -55	-5 to -55	±4.0	±3.0	0.01
> 125 to 140 GHz	-10 to -50	-10 to -50	±5.0	±4.0	0.01
> 140 to 145 GHz	-6 to -50	-6 to -50	±5.0	±4.0	0.01

a. Accuracy does not include effects of the MN4697C test set (affects < 54 GHz).

Receiver Compression^a

Receiver compression point is defined as the port power level beyond which the response may be compressed more than 0.2 dB relative to normalization level. 10 Hz IF bandwidth used to remove trace noise effects. All typical.

Frequency (GHz)	Compression ME7838D4 Option 51	Compression ME7838D4 Option 62
70 kHz to 300 kHz	6	6
> 0.3 to 10 MHz	12	13
> 0.01 to 24	12	14
> 24 to 110	10	10
> 110 to 125	7	7
> 125 to 145	7	7

a. Using the 806-206-R 1.85 mm (61 cm, 24 in long) test port cables between the VNA and the MA25300A mmWave modules.

b. 145 to 150 GHz available as operational.

High Level Noise

Noise measured at 1 kHz IF bandwidth, at maximum power or compression limit (whichever is less), with through transmission. RMS. Typical.

Frequency (GHz)	Frequency (GHz) Magnitude (dB)	
70 kHz to 500 kHz	< 0.04	< 0.4
> 0.5 to 2 MHz	< 0.006	< 0.06
> 2 to 10 MHz	< 0.006	< 0.06
> 0.01 to 24	< 0.006	< 0.06
> 24 to 54	< 0.005	< 0.06
> 54 to 80	< 0.005	< 0.06
> 80 to 110	< 0.008	< 0.09
> 110 to 120	< 0.008	< 0.09
> 120 to 125	< 0.011	< 0.11
> 125 to 140	< 0.016	< 0.16
> 140 to 145	< 0.016	< 0.16

Stability

Ratioed measurement at maximum leveled power with nominally a full coaxial reflect or a stable coaxial thru over the normal specified temperature range. Typical.

Frequency (GHz)	Magnitude (dB/°C)	Phase (deg/°C)
70 kHz to 300 kHz	< 0.015	< 0.15
> 0.3 to 2 MHz	< 0.015	< 0.1
> 2 to 10 MHz	< 0.02	< 0.1
> 0.01 to < 2.5	< 0.02	< 0.05
2.5 to 30	< 0.02	< 0.09
> 30 to 54	< 0.01	< 0.07
> 54 to 80	< 0.015	< 0.1
> 80 to 110	< 0.015	< 0.15
> 110 to 120	< 0.02	< 0.2
> 120 to 125	< 0.025	< 0.2
> 125 to 140	< 0.03	< 0.35
> 140 to 145	< 0.04	< 0.5

Frequency Resolution, Accuracy, and Stability

Resolution	Accuracy	Stability
1 Hz	± 5 x 10 ⁻⁷ Hz/Hz	< 5 x 10 ⁻⁹ /°C over 0 °C to 50 °C temperature
	(at time of calibration)	< 1 x 10 ^{–9} /day aging, instrument on

Uncorrected (Raw) Port Characteristics

Typical performance

Frequency (GHz)	Directivity (dB)	Port Match (dB)
70 kHz to 10 MHz	10 ^a	8
> 0.01 to < 2.5	9 ^a	10
2.5 to 30	5 ^a	12
> 30 to 40	5 ^a	10
> 40 to 54	9	10
> 54 to 80	9	10
> 80 to 110	5	7
> 110 to 120	5	7
> 120 to 125	5	7
> 125 to 140	5	7
> 140 to 145	5	6

a. Raw directivity is degraded below 300 kHz, 2.2 to 2.5 GHz and in narrow bands within 10 to 34 GHz.

Corrected System Performance and Uncertainties - SOLT/SSST

With 12-term broadband calibration (concatenated SOLT and Triple Offset Short Calibration (SSST)), using the 3659 0.8 Calibration Kit. Cable flexure and drift effects are not included. Typical.


Frequency Range	Directivity (dB)	Source Match (dB)	Load Match (dB)	Reflection Tracking (dB)	Transmission Tracking (dB)
70 kHz to 10 MHz	36	36	36	± 0.1	± 0.1
> 0.01 to < 2.5 GHz	38	41	38	± 0.05	± 0.05
2.5 to 20 GHz	40	41	40	± 0.05	± 0.05
> 20 to 67 GHz	35	41	35	± 0.05	± 0.07
> 67 to 80 GHz	35	38	35	± 0.05	± 0.07
> 80 to 95 GHz	35	40	35	± 0.05	± 0.07
> 95 to 110 GHz	34	37	34	± 0.05	± 0.07
> 110 to 125 GHz	30	34	30	± 0.07	± 0.09
> 125 to 140 GHz	28	28	28	± 0.09	± 0.11
> 140 to 145 GHz	26	28	26	± 0.11	± 0.13


Measurement Uncertainties - SOLT/SSST


The graphs give measurement uncertainties after the above calibration. The errors are worst case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability while noise effects are added on an RSS basis. 10 Hz IF Bandwidth is used. For transmission uncertainties, it is assumed that $S_{11} = S_{22} = 0$. For other conditions, please use our free Exact Uncertainty calculator software, downloadable from the Anritsu web site at, www.anritsu.com.


Note

Although the graph axes show specific S-parameters, they apply to all transmission or reflection parameters, as appropriate.

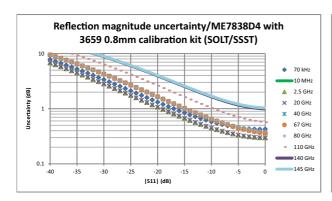

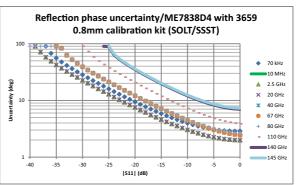


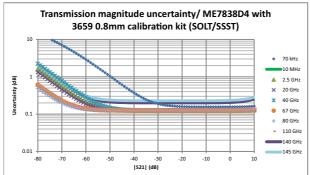


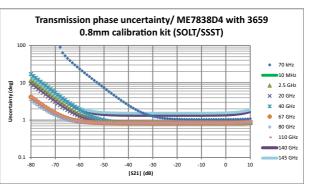



Corrected System Performance and Uncertainties - LRL/LRM

With 12 term LRL/LRM calibration using single-ended probes and on-wafer substrate standards. Typical. Based on a typical vendor supplied impedance standard substrate. Includes a nominal model for probe repeatability (new probes and substrates assumed). Does not include environmental drift.

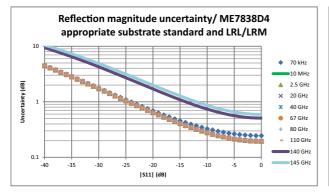


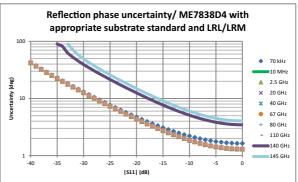

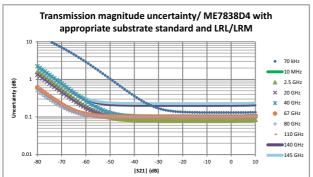

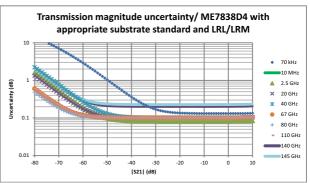

Block Diagram - ME7838D4 4-Port Broadband VNA System

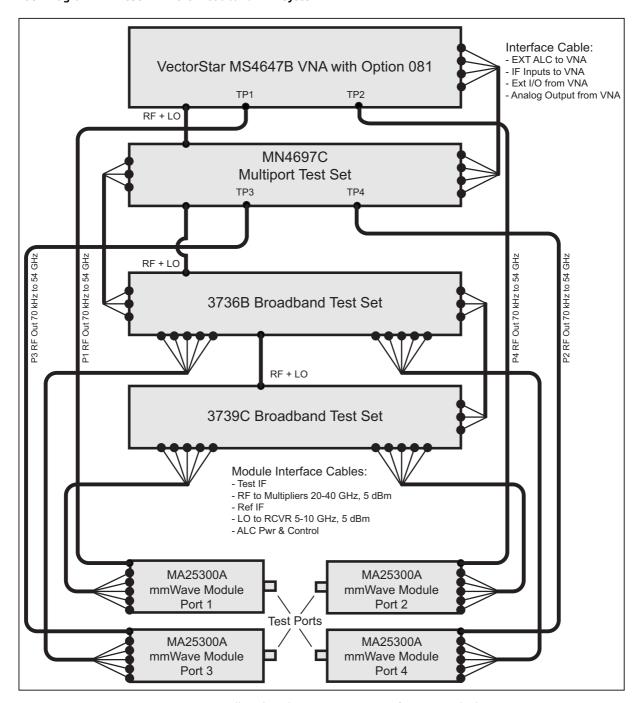

ME7838D4 4-Port Broadband (70 kHz to 145 GHz) Configuration Block Diagram


SC8215 and SC7287 Kelvin Bias Tees

Provides Sense and Force SMC connections close to the DUT to minimize the IR drops associated with the impedances between the bias tee and the DUT. The bias tees are V-type connectors and are to be connected to the inputs of the 374x or MA25300A modules, thus providing biasing through the DC path of the mmWave modules to the 1mm or 0.8mm test ports.


Part Number	Description	Voltage	Current		
SC8215	The SC8215 is a V-connectorized bias tee usable with the mmWave modules in the ME7838D4 for system frequencies of 70 kHz to 145 (150) GHz. Stand-alone, it is usable to 70 GHz.	Max Voltage: 16 VDC	Max Current: 100 mA		
SC7287	The SC7287 is a V-connectorized bias tee usable with the mmWave modules in the ME7838D4 for system frequencies of 100 MHz to 145 (150) GHz. Stand-alone, it is usable to 70 GHz.	Max Voltage: 50 VDC	Max Current: 500 mA		
Tri-Axial Output SMUs	For applications requiring Source Measure Units (SMU) with tri-axial outputs, a tri-axial (male) to SMC (male) cable is available. Check the accessories list for ordering information on page 33.				

Measurement Examples

The following figures are measurement examples of typical ME7838D4 Broadband system performance.

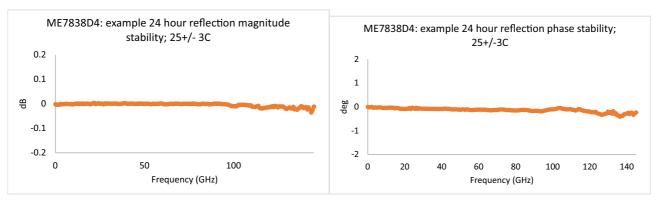


ME7838D4 example broadband reflection magnitude and phase stability over 24 hours (short connected directly at 0.8 mm test port).

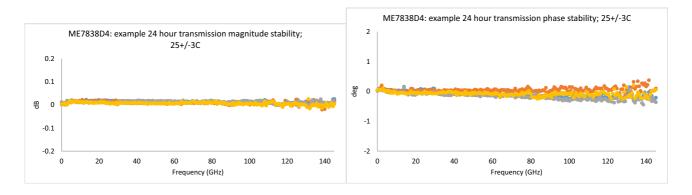


ME7838D4 example broadband stability over 24 hours.

These are measurements of thru lines (directly connected to the 0.8 mm test ports) on some of the possible two port paths.

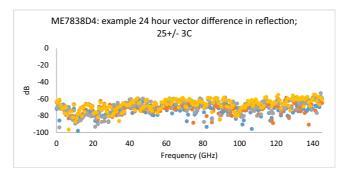

ME7838D4 example broadband reflection stability of a thru line over 24 hours.

These are measurements over some possible paths and the result is the vector difference in complex reflection coefficient expressed in dB terms.

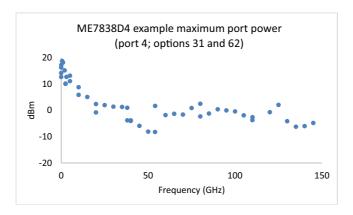

ME7838D4 4-Port Broadband Typical Maximum Port Power with options 31 and 62. The max power for port 4 is shown, with similar values obtained on port 3. Ports 1 and 2 will be lower below 54 GHz (up to 7 dB lower just below 54 GHz).

Specifications for Waveguide Band Configuration

ME7838D4 4-Port Millimeter-Wave VNA, Waveguide Bands

Three configurations are available for 4-port waveguide band operation for E and W bands when using the ME7838D4 4-port system.

- First, the Anritsu MA25300A Broadband Millimeter-Wave (mmWave) module can be used with coax-to-waveguide adapters.
- Second, the Anritsu 3744A-EE or 3744A-EW millimeter-Wave module can be used. These version modules operate in the extended E and W waveguide bands and are operational using the MS4644B or MS4647B VectorStar (with Options 8x and 7), and the 3739C broadband/millimeter-wave test set and 3736B Broadband test set.
- The third configuration option is to use external millimeter-wave modules with any model VectorStar (with Options 8x and 7), and the 3739C test set and 3736B broadband/millimeter-wave test set. For millimeter bands above 110 GHz, VDI modules may be used.

E and W Band Operation Using the 3744A-EE or 3744A-EW mmWave Module



3744A-EE/3744A-EW Millimeter-Wave Module with Waveguide Adapter

The MA25300A Broadband mmWave module can be adapted to a waveguide band output by adding an available waveguide band adapter. VectorStar menus automatically configure the system frequencies incorporating the MA25300A module for banded operation. Using the MA25300A modules provides the opportunity to sweep frequencies for broadband applications and quickly convert to waveguide configurations for banded measurements. The advantages of small compact modules with excellent RF performance and power range control can therefore be realized in both broadband and waveguide configurations when using the MA25300A mmWave module. Care should be taken that the cantilever forces on the 0.8 mm connector are not excessive (e.g., by incorporating a support bracket).

For systems where only waveguide band operation is required, the 3744A-EE or 3744A-EW mmWave module can be used.

The 3744A-EE or 3744A-EW mmWave module operates from 54 GHz to 110 GHz. The band supported is determined by the waveguide adapter connected to the 1 mm test port output of the 3744A-EE/EW module:

3744A-EE configures the module for Extended E Band

3744A-EW configures for Extended W Band

The RF input port of the 3744A-EE or 3744A-EW module is restricted below 54 GHz, however, the RF input port retains a DC connection to the 1 mm test port. Thus, the waveguide adapter can be removed for on-wafer applications from 54 GHz to 110 GHz operation and the on-wafer DUT can be biased through the RF input port.

Band	Frequency Range	Waveguide Flange	Transmission/Reflection Module
Ext-E	56 to 94 GHz ^a	WR-12	3744A-EE
Ext-W	65 to 110 GHz	WR-10	3744A-EW

a. Operational to 95 GHz.

Port Power, Noise Floor, Dynamic Range - 3744A-EE/3744A-EW mmWave Modules

System dynamic range is defined as the ratio of the source power to the noise floor.

Maximum Receiver Power is defined as the 0.2 dB compression point of the receiver at the waveguide port.

Receiver dynamic range is defined as the ratio of maximum receive power to the noise floor.

Noise Floor measurements are RMS, are made with no average in a 10 Hz IF bandwidth, and include an isolation calibration.

All values are typical.

3744A-EE Extended-E Band (WR-12) Waveguide

Frequency Range (GHz)	Source Power (dBm)	Max. Receive Power (0.2 dB comp. pt.) (dBm)	Noise Floor (dBm)	System Dynamic Range (dB)	Receiver Dynamic Range (dB)
56 to 60	-2	11	-111	109	122
> 60 to 65	0	11	-106	106	117
> 65 to 80	-3	11	-109	106	120
> 80 to 85	-4	11	-112	108	123
> 85 to 90	-4	11	-110	106	121
> 90 to 94 ^a	0	12	-105	105	117

a. Operational to 95 GHz.

3744A-EW Extended-W Band (WR-10) Waveguide

Frequency Range (GHz)	Source Power (dBm)	Max. Receive Power (0.2 dB comp. pt.) (dBm)	Noise Floor (dBm)	System Dynamic Range (dB)	Receiver Dynamic Range (dB)
65 to 67	0	11	-106	106	117
> 67 to 80	-3	11	-109	106	120
> 80 to 85	-4	11	-112	108	123
> 85 to 90	-4	11	-110	106	121
> 90 to 100	0	12	-105	105	117
> 100 to 110	-5	12	-110	105	122

Power Range, Accuracy, Linearity, and Resolution

Accuracy is defined at -10 dBm or max rated power, whichever is lower. Linearity is defined as the incremental error between the accuracy test power level and 5 dB below. Typical.

Frequency	Rar	nge (dBm)	Accuracy	Linearity	Resolution
(GHz)	ME7838D4	ME7838D4 Option 62	(dB)	(dB)	(dB)
> 54 to 60 GHz	-4 to -55	-4 to -55	±2.0	±1.5	0.01
> 60 to 67 GHz	-3 to -55	-3 to -55	±2.0	±1.5	0.01
> 67 to 80 GHz	-3 to -55	-3 to -55	±2.0	±1.5	0.01
> 80 to 85 GHz	-7 to -55	-7 to -55	±2.0	±1.5	0.01
> 85 to 90 GHz	-6 to -55	-6 to -55	±2.0	±1.5	0.01
> 90 to 95 GHz	-5 to -55	-5 to -55	±2.0	±1.5	0.01
> 95 to 105 GHz	-5 to -55	-5 to -55	±3.0	±2.0	0.01
> 105 to 110 GHz	-6 to -55	-6 to -55	±3.0	±2.0	0.01
> 110 to 120 GHz	-3 to -55	-3 to -55	±4.0	±3.0	0.01
> 120 to 125 GHz	-5 to -55	-5 to -55	±4.0	±3.0	0.01
> 125 to 140 GHz	-10 to -50	-10 to -50	±5.0	±4.0	0.01
> 140 to 145 GHz	-6 to -50	-6 to -50	±5.0	±4.0	0.01

Corrected System Performance/Uncertainties - 3744A-EE/3744A-EW mmWave Modules

With 12-term Offset Short Sliding Load or LRL calibrations, using high precision waveguide sections and standards from the appropriate calibration kit.

3744A-EE Extended-E Band (WR-12) Waveguide - 56 GHz to 94 GHz


Calibration Type	Directivity (dB)	Source Match (dB)	Load Match (dB)	Reflection Tracking (dB)	Transmission Tracking (dB)
Offset Short	> 44	> 33	> 44	± 0.080	± 0.100
LRL	> 44	> 43	> 44	± 0.006	± 0.006


3744A-EW Extended-W Band (WR-10) Waveguide - 65 GHz to 110 GHz


Calibration Type	Directivity (dB)	Source Match (dB)	Load Match (dB)	Reflection Tracking (dB)	Transmission Tracking (dB)
Offset Short	> 40	> 30	> 46	± 0.080	± 0.100
LRL	> 40	> 40	> 46	± 0.006	± 0.006


Measurement Uncertainties - Extended-E Band - SSLT

The graphs give measurement uncertainties after the above calibration, but do not include the effects of cantilever forces on the connectors or flanges. The errors are worse case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. For transmission uncertainties, it is assumed that $S_{21} = S_{12} = 0$. For reflection uncertainties, it is assumed that $S_{21} = S_{12} = 0$. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu web site at www.anritsu.com. Typical.

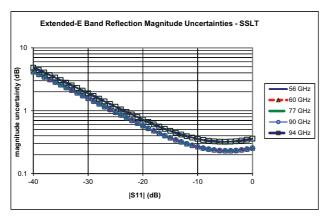

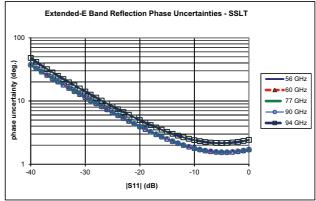


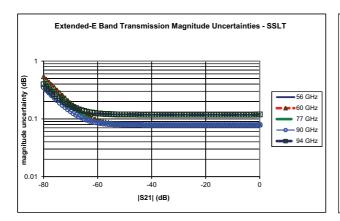


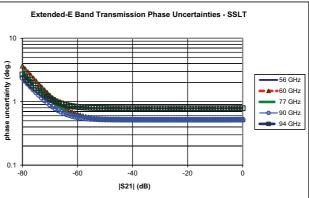



Measurement Uncertainties - Extended-E Band - LRL

The graphs give measurement uncertainties after the above calibration, but do not include the effects of cantilever forces on the connectors or flanges. The errors are worse case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. For transmission uncertainties, it is assumed that $S_{21} = S_{12} = 0$. For reflection uncertainties, it is assumed that $S_{21} = S_{12} = 0$. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu web site at www.anritsu.com. Typical.

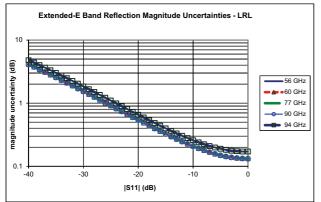

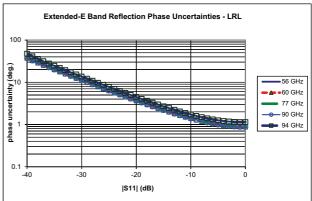


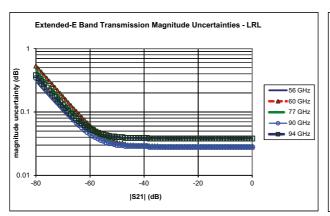


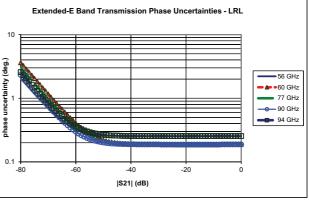



Measurement Uncertainties - Extended-W Band - SSLT

The graphs give measurement uncertainties after the above calibration, but do not include the effects of cantilever forces on the connectors or flanges. The errors are worse case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. For transmission uncertainties, it is assumed that $S_{21} = S_{12} = 0$. For reflection uncertainties, it is assumed that $S_{21} = S_{12} = 0$. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu website at www.anritsu.com. Typical.

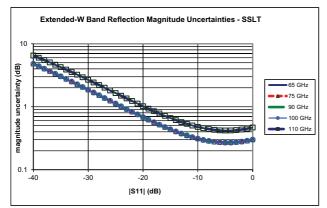

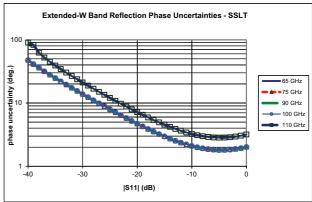


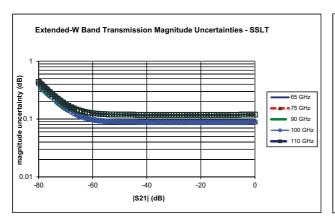


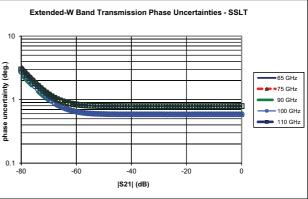



Measurement Uncertainties - Extended-W Band - LRL

The graphs give measurement uncertainties after the above calibration, but do not include the effects of cantilever forces on the connectors or flanges. The errors are worse case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. For transmission uncertainties, it is assumed that $S_{21} = S_{12} = 0$. For reflection uncertainties, it is assumed that $S_{21} = S_{12} = 0$. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu website at www.anritsu.com. Typical.

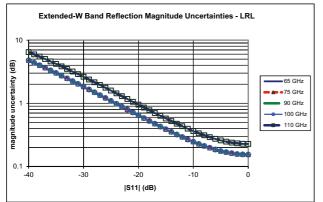

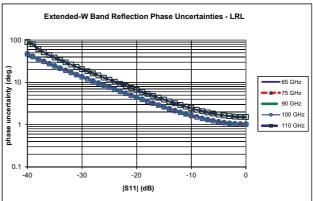

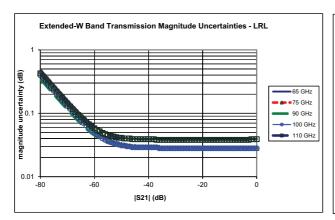

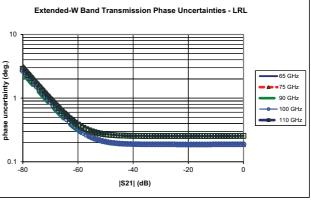

ME7838D4 with Option 41/48 and 3744A-Rx mmWave Noise Figure Measurements




3744A-Rx Receiver Module

The 3744A-Rx receiver module can be used with Option 41, Noise Figure, and the ME7838D4 mmWave or broadband system to perform mmWave noise figure measurements from 30 GHz to 125 GHz. (For receiver-only modules operating to 145 (150) GHz, consult the factory). The receiver bypasses the internal couplers (see block diagram), maximizing the noise figure of the receiver for optimum noise figure measurement accuracy. The receiver is derived from the 3743A mmWave module and utilizes the same nonlinear transmission line technology for optimum mmWave performance. Using the advantages of the 3743A mmWave module system architecture provides a unique solution to mmWave noise figure measurements previously unavailable.

With Option 48, differential (and common-mode) noise figure measurements are possible in the same wide frequency ranges. In this case, two 3744A-Rx modules (along with needed pre-amplifiers/filters) are used to complete the differential receiver. The Rx modules are typically connected as ports 2 and 4 to act as the differential/common-mode noise receiver when used with the ME7838D4.

Block Diagram - 3744A Receiver Module

As with all cold source method noise figure measurements, the output of the DUT is first sent to an external composite receiver for pre-amplification. This ensures that the system noise figure is minimized for optimum measurement accuracy. The Anritsu Noise Figure Uncertainty Calculator (available on the website at www.anritsu.com) can be used to determine optimum preamplifier gain needed for the desired measurement uncertainty.

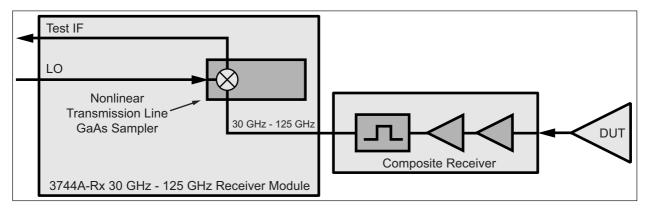

3744A-Rx Block Diagram

(Two composite receivers and two 3744A-Rx modules are used with Option 48 for differential or common-mode noise figure measurements.)

3744A-Rx Receiver Compression, Noise Floor

Receiver Compression Point is defined as the port power level beyond which the response may be compressed more than 0.2 dB relative to the normalization level. 10 Hz IF bandwidth is used to remove trace noise effects. All typical.

Noise Floor is relative to the receiver power calibration performed at –10 dBm. Typical.

Frequency (GHz)	Receiver Compression (dBm) ^a	Noise Floor (dBm) ^b
30 to 54	0	-124
> 54 to 60	0	-122
> 60 to 67	0	-117
> 67 to 80	0	-120
> 80 to 85	0	-123
> 85 to 90	0	-121
> 90 to 95	0	-121
> 95 to 105	0	-117
> 105 to 110	0	-122
> 110 to 120	-5	-120
> 120 to 125	-5	-117

a. At the 3744A-Rx test port.

b. Excludes localized spurious responses and crosstalk.


VectorStar ME7838D4 Waveguide Bands from 50 GHz to 750 GHz (1.1 THz)

The VectorStar 4-Port Millimeter-Wave system supports VDI modules starting at 50 GHz. System performance is based on the specific mmWave module installed and appropriate cal kit. Contact the vendor web site for additional information.



VDI Millimeter-Wave Module

Block Diagram - Millimeter-Wave VNA System

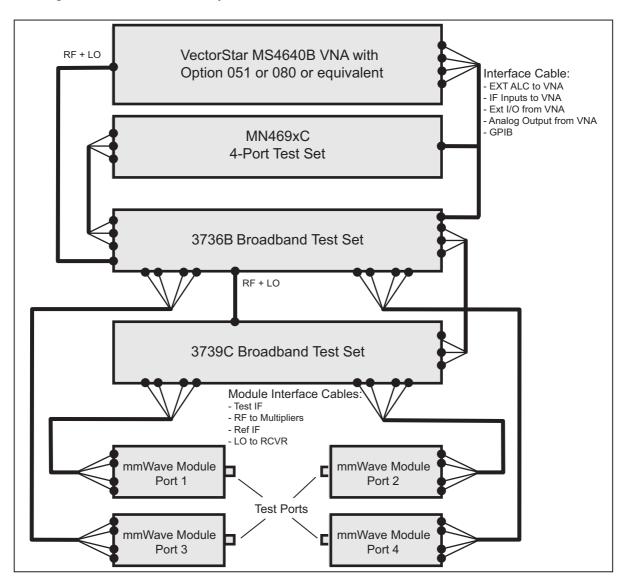

ME7838D4 4-Port Broadband Millimeter-Wave Configuration Block Diagram

VectorStar ME7838D4 Millimeter-Wave System with VDI Modules

This section provides the specifications for the VectorStar MS4640B series microwave Vector Network Analyzers (VNAs) when configured with the Virginia Diodes, Inc. millimeter-wave (mmWave) frequency extension modules. The following frequency bands are supported:

Waveguide Band	WR15	WR10	WR8.0	WR6.5	WR5.1	WR4.3	WR3.4	WR2.8	WR2.2	WR1.5	WR1.0 ^a
Frequency (GHz)	50 to 75	75 to 110	90 to 140	110 to 170	140 to 220	170 to 260	220 to 330	260 to 400	330 to 500	500 to 750	750 to 1100

a. Contact Anritsu

System Configuration with VDI Modules

The VectorStar Millimeter-Wave system provides control of VDI modules for frequency extension coverage up to 1.1 THz*. MS4640B series VectorStar VNA may be configured for mmWave operation by adding the appropriate control option and test set. System requirements include:

VectorStar VNA Model MS4642B, MS4644B, or MS4647B

(Note: For 1.1 THz operation the 40 GHz MS4644B or higher model is required.)

Options MS4640B Option 7, Receiver Offset

MS4640B Option 81, 83, or 85

Test Set 3739C Test Set MN469xC Test Set 3736B Test Set

Cable SM6537 Interface Cable – Connection between VectorStar and the VDI mmWave module is provided with

this interface cable.

Each VDI module is equipped with a dedicated external power supply and DC cable.

VDI Module Performance with VectorStar

Performance: Directivity values are valid when using appropriate VDI calibration kits. All extender heads include a

precision Test Port. The performance values here are typical and subject to change. Extended and

other frequency ranges may be available.

Stability: Measured for 1 hour after a 1 hour system warm-up, in a stable environment with ideal cables.

Dynamic Range: The dynamic range (RBW 10 Hz) is measured by first connecting two TxRx heads together and normalizing

the uncalibrated \$21 and \$12. The heads are then disconnected and terminated with a waveguide short. The

rms of the measured S21 & S12 give the system dynamic range.

Test Port Power: Test Port Power is typical. Reduced power is possible at band edges.

VDI Extenders-Summary of Specifications (Typical)

Waveguide Band	WR15	WR12	WR10	WR8.0	WR6.5	WR5.1	WR4.3	WR3.4	WR2.8	WR2.2	WR1.5 ^a	WR1.0 ^a
Frequency Coverage [GHz]	50-75	60-90	75-110	90-140	110-170	140-220	170-260	220-330	260-400	330-500	500-750	750-1100
Dynamic Range BW = 10 Hz, [dB], (Typical)	120	120	120	120	120	120	115	115	100	110	100	65
Magnitude Stability [± dB]	0.1	0.1	0.1	0.15	0.25	0.25	0.3	0.3	0.5	0.5	0.4	0.5
Phase Stability [± deg.]	1.5	1.5	1.5	2	4	4	4	6	6	6	4	6
Test Port Power [dBm], (Typical)	13	18	18	16	13	6	4	1	-10	-3	-25	-30
Test Port Input Limit ^b [dBm, Saturation/Damage]	30	30	30	30	30	30	28	26	16	10	-3	-3
Directivity [dB]	30	30	30	30	30	30	30	30	30	30	30	30

a. Mini versions of these modules are available with higher port power and dynamic range.

VDI Module Head Configurations

TxRx Transmitter with two receivers (reference and measurement), and two couplers. Two TxRx heads are

required for full two-port measurements.

TxRef Transmitter with reference receiver and one coupler.

Rx Measurement receiver.

Tx Transmitter.

VDI Module Options

Micrometer-Drive Variable Attenuator A 0 dB to 30 dB micrometer-drive variable attenuator option is available on TxRx and Tx modules up

through WR1.5. If ordered, "-Attn" is added as an option suffix to the module model number. The attenuators reduce TPP and DR by as much as 8 dB in the WR3.4 and higher frequency bands and add

approximately 2 in to the enclosure.

Increased Test Port Power Options exist for increasing test port power in some full bands or in partial bands.

Consult factory for more information.


Non-Standard Frequency Bands Non-standard frequency bands or other specific needs are possible.

Consult factory for more information.


Custom Configuration Anritsu/VDI will work with customers to reconfigure any extender to meet specific needs.

 $b. \ \ \text{Test Port Input Limits are shown for standard test port power models only}.$

ME7838D4 Measurement Examples Using VDI Millimeter-Wave Modules

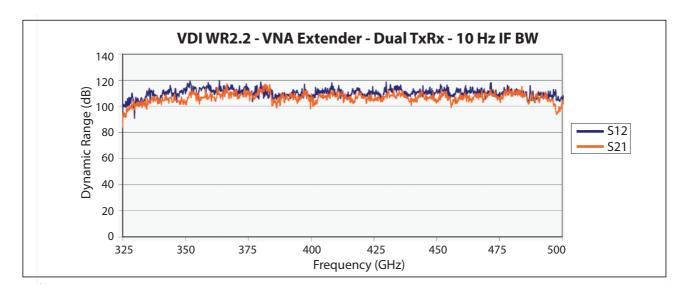


Typical Dynamic Range Plot of VDI WR2.2 Module - 10 Hz IFBW

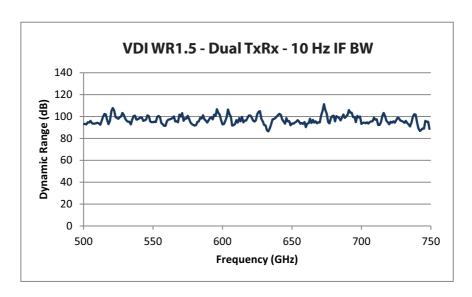

Typical Dynamic Range Plot of VDI WR1.5 Dual TxRx – 10 Hz IFBW

ME7838D4 400 GHz Power Sweep with VDI WR2.2 TxRx Module

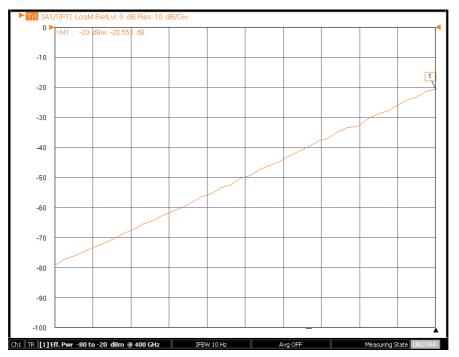

Typical real-time power sweep of VDI WR2.2 module using system power level control and no mechanical attenuators.

Standard Capabilities for All Configurations

For standard capabilities of the VectorStar VNAs, please see the **VectorStar MS4640B Series VNA Technical Data Sheet – 11410-00611**, available at www.anritsu.com.

Mechanical and Environmental

MS4640B Vector Network Analyzer Dimensions without rack mount option

Height 267 mm body (6u)

286 mm between feet outer edges

Width 426 mm body

457 mm between feet outer edges

487 mm between front panel handles outer edges

Depth 502 mm body

591 mm between handle and foot outer edges

331 min between nande and look outer edges

Weight <30 kg (< 66 lbs), Typical weight for a fully-loaded MS4647B VNA

3739C Broadband/Millimeter-Wave Test Set Dimensions without rack mount option

Height 89 mm body (2u)

108 mm between feet outer edges

Width 426 mm body

457 mm between feet outer edges

487 mm between front panel handles outer edges

Depth 502 mm body

591 mm between handle and foot outer edges

Weight 5.75 kg

3736B Broadband/Millimeter-Wave Test Set Dimensions without rack mount option

Height 89 mm body (2u)

108 mm between feet outer edges

Width 426 mm body

457 mm between feet outer edges

487 mm between front panel handles outer edges

Depth 502 mm body

591 mm between handle and foot outer edges

Weight 5.75 kg

MN469xC 4-Port Test Set

Height 89 mm (3u)

108 mm between feet outer edges

Width 426 mm body

444 mm between feet outer edges

487 mm between front panel handles outer edges

Depth 502 mm body

591 mm between handle and foot outer edges

Weight < 10 kg (fully loaded)

MA25300A Millimeter-Wave Module

Height 26.4 mm
Width 54 mm
Depth 72.4 mm
Weight 0.22 kg

Environmental - Operating Conforms to MIL-PRF-28800F (Class 3).

Temperature Range $0 \,^{\circ}\text{C}$ to +50 $^{\circ}\text{C}$ without error codes, except for 'unleveled' error messages that may occur at the extreme

edges of the temperature range and above

Relative Humidity 5 % to 95 % at +30 °C, Non-condensing

Altitude 4,600 m (15,000 ft)

Environmental - Non-Operating

Temperature Range -40 °C to +71 °C

Relative Humidity 0 % to 90 % at +30 °C, Non-condensing

Altitude 4,600 m (15,000 ft)

Regulatory Compliance

EMC 2014/30/EU, EN 61326:2013, CISPR 11/EN 55011, IEC/EN 61000-4-2/3/4/5/6/8/11 European Union

Low Voltage Directive 2014/35/EU

Safety EN 61010-1:2010

RoHS Directive 2011/65/EU & Amendment 2015/863

EMC SI 2016/1091; BS EN 55011 & BS EN 61000-4-2/3/4/5/6/8/11 Consumer Protection (Safety) SI 2016/1101; BS EN 61010-1:2010 Environmental Protection SI 2012/3032; 2011/65/EU & 2015/863 United Kingdom

ICES-1(A)/NMB-1(A) Canada

Australia and New Zealand RCM AS/NZS 4417:2012

Warranty

The ME7838D4 4-Port BB/mmWave VNA and related accessories offer a 1-year warranty from the date of shipment (excluding VDI modules). Please contact your local service center for additional warranty coverage.

Calibration and Correction Capabilities

Triple-Offset-Short-Through (SSST) and overdetermined offset short (mSSST) Short-Open-Load-Reciproad ISORIa or Unknown Through Method (SSIR, SSSR) Line-Reflect-Line (IRL) / Line-Reflect-Match (IRM) – (up to 5 bands supported) Advanced-HIM (A-RMP) for improved on-wafer calibrations mTRL (Multiline TRL) Hybrid Cals (allows combination of sub-cals of different type or media) Auto-Call** Thru Update available Secondary match correction available for improved low insertion loss measurements Full 2-port (up to two at once), 3-port and 4-port calibrations 1 path/2 port Frequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Merged Calibration Merged multiple calibration methods over bands of frequency points. Note that merge does not need to be used for broadband coavial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Adapter Removal Calibration Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that desgradation is dependent on the frequency steps size in the initial calibration detectrical length of the user's setup. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla The source power will match the target calibration on the system and the power meter, in absolute accuracy of the calibratory of the calibration power meter and the power meter, in be short by experience of time (determined by thermal drift of the system and the power meter, in absolute accuracy of the calibration gover in the medial test power in the freque	Calibration Methods	Short-Open-Load-Through (SOLT) with Fixed or Sliding Load and supporting .s1p-defined cal kits Offset-Short-Offset-Short-Load-Through (SSLT) with Fixed or Sliding Load
Short-Open-Load-Reciprocal (SOLR) or Unknown Through Method (SSLR, SSSR) Line-Reflect-Line (TRL) - (up to 5 bands supported or multi-line configuration Thru-Reflect-Line (TRL) - (up to 5 bands supported) Advanced-Line (TRL) - (up to 5 bands supported) Advanced-Line (TRL) Hybrid Cals (allows combination of sub-cals of different type or media) Auto-Call* Thru Update available Secondary match correction available for improved low insertion loss measurements Correction Models Full 2-port (up to two as once), 3-port and 4-port calibrations 1 path/2 port Frequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Merge dalibration Merge multiple calibration methods over bands of frequency points. Note that merge does not need to be used for broadband coaxial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Antificus claribration is the state can be done as one unified calibration. Seference Impedance Modify the reference impedance from 50 to any impedance greater than 0 to 1. Interpolation Allows interpolation between calibration frequency points. Adapter Removal Calibration Allows interpolation between calibration frequency points. Adapter Removal Calibration Allows interpolation between calibration frequency points. Adapter Removal Calibration Characterizes and fremover's an adapter that is used during calibration having in the initial calibration and it electrical length of the user's setup. Power Power Meter Correction Power Meter Correction Prover Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired afference power accuracy and the desired reference power accuracy at the desired reference power accuracy and the power free calibrations are available to enhance power accuracy at the desired reference power accuracy and the power free calibrations are available to enhance power accuracy at the desired reference power accuracy at the desired reference power accuracy at the desired reference power free		3
Line-Reflect-Line (RIL) / Line-Reflect-Line (RIL) / Line-Reflect-Line (RIL) / Line to 5 bands supported for multi-line configuration Thru-Reflect-Line (RIL) / Line to 5 bands supported (Advanced-LRM (A-LRM*) for improved on-wafer calibrations mTRIL, Multitibile TRIL) Hybrid Cals (allows combination of sub-cals of different type or media) Autocal** Thru Update available Secondary match correction available for improved low insertion loss measurements Correction Models Full 2-port (up to two at once), 3-port and 4-port calibrations 1-path/2 port 1-path/2 port 1-path/2 port (up to two at once), 3-port and 4-port calibrations 1-path/2 port 1-path/2 port (up to two at once), 3-port and 4-port calibrations (1-path/2 port 1-path/2 port 1		
Thru-Reflect-Line (TRL) - (up to 0 5 bands supported) Advanced-Laft M/L-LRMP) in improved on-wafer calibrations mTRL (Multilline TRL) Hybrid (Sal (allows combination of sub-cals of different type or media) Autocal** Thru Update available Secondary match correction available for improved low insertion loss measurements Correction Models Full 2-port (up to two at once), 3-port and 4-port calibrations 1 path/2 port Frequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Note that merge does not need to be used for broadband coaxial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations Standards Use the Amritsu calibration kits. These can be done as one unified calibration significant calibrations with a calibration significant calibration in the standards used for broadband coaxial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations Standards Use the Amritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50.0 to any impedance greater than 0.0. Adapter Removal Calibration Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequences and that degradation is dependent on the frequency step size in the initial calibration and the electrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence may be a subsequence of the user's setup. Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence may be used to the cultivate of the user's setup. Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence may be used to the cultivate of the cultivate dopower levels directly as an offset. Multiple newer accuracy at the desired reference pla frequency ste		
Advanced-LRM (A.LRM*) for improved on-wafer calibrations mTRI, (Multitine TRI). Hybrid Cals (allows combination of sub-cals of different type or media) Auto Cal** Thru Update available Secondary match correction available for improved low insertion loss measurements Full 2-port (up to two at once), 3-port and 4-port calibrations 1 path/2 port Prequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Merged Calibration Merge multiple calibration methods over bands of frequency points. Note that merge does not need to be used for broardshard cavatal (SOLT/R-SS57/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Note that merge does not need to be used for broardshard cavatal (SOLT/R-SS57/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anrisu calibration kits USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and telectrical length of the user's setup. Adapter Removal Calibration Characterizes and *removes* an adapter that is used during calibration that will not be used for subsequence measurement of non-insertable devices. Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference plan accuracy of the calibrated power will be dependent on the power meter. The absolute in the subsequence of the calibrated power will be dependent on		* / * / * / * / * / * / * / * / * / * /
mrRt (Multiline TRL) Hybrid Cal (allows combination of sub-cals of different type or media) AutoCall** Tru Update available Secondary match correction available for improved low insertion loss measurements Correction Models Full 2-port (up to two ac once), 3-port and 4-port calibrations 1 path? 2-port Frequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Note that merge does not need to be used for broadband coaxial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations Merged Calibration Merged Calibration Standards Use the Anristu calibration kits. These can be done as one unified calibration in calibrations using Anristus calibration kits. These can be done as one unified calibration files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequency accuracy and the interpolation and of electrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence measurements for accurate measurement of non-insertable devices. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference plant match the target calibration power as read by the power meters to within-disolute accuracy of the calibrated power will be dependent on the power meter shower location accuracy of the calibrated power will be dependent on the power meter and sensor under accuracy of the calibrate power will be dependent on the power meter and sensor under accuracy of the calibrate power will be dependent on the power meter and sensor under accuracy of the calibrate power will		
Hybrid Cals (allows combination of sub-cals of different type or media) AutoCal** Thru Update available Secondary match correction available for improved low insertion loss measurements Full 2-port (up to two at once), 3-port and 4-port calibrations 1 path/2 port Frequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Merge multiple calibration are unusual foliations or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Note that merge does not need to be used for broadband costal (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Interpolation Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequency and the requency step size in the initial calibration and electrical length of the user's setup. Adapter Removal Calibration Characterizes and "removers" an adapter that is used during calibration that will not be used for subsequency device measurement of non-insertable devices. Dispersion Compensation Power Meter Correction Power Meter Correction Prover Meter Carlibrations. Flat Power Calibrations. Flat Power Calibrations. Flat Power Calibrations. Characterizes and "removers" an adapter that is used during calibration that will not be used for subsequency of the calibrate of the calibration power, as read by the power meter, to within -0.1 dispersions of the calibration are available to enhance power accuracy at the desired reference pla. The source power will method the power during the power during the power meter and subsolute accuracy of the calibration power, as read by the power meter		
Autocal** Thru Update available Secondary match correction available for improved low insertion loss measurements Correction Models Full 2-port (up to two at once), 3-port and 4-port calibrations 1 path/2 port Frequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Merged Calibration Merged Multiple calibration methods over bands of frequency points. Note that merge does not need to be used for broadband coaxial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that despondation is dependent on the frequency step size in the initial calibration and inference of the calibration of the user's setup. Adapter Removal Calibration Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that despondation is dependent on the frequency step size in the initial calibration and inference of the calibration of the user's setup. Adapter Removal Calibration Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla The source power will match the target calibration power, as read by the power meter, to within -0.1 dishort periods of time (determined by thermal drift of the system and the power meter, to within -0.1 dishort periods of time (determined by thermal drift of the system and the power meter, to withi		
Thru Update available Secondary match correction available for improved low insertion loss measurements Correction Models Full 2-port rup to two at once), 3-port and 4-port calibrations 1 path/2 port Prequency response (transmission or reflection, any path combination) Reflection on loy (1, 2, 3, or 4 ports) Merge multiple calibration methods over bands of frequency points. Note that merge does not need to be used for broadband coasial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Annits calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Annitsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Annitsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Interpolation Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that desgradation is dependent on the frequency step size in the initial calibration and to electrical length of the user's setup. Adapter Removal Calibration Characterizes and fremovers' an adapter that is used during calibration that will not be used for subsequence and that desgradation is dependent on the frequency step size in the initial calibration and to electrical length of the user's setup. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla frequency and propover levels and the power meter, to within -0.1 dB short periods of time (electrical by temporal off of the system and the power meter, to within -0.1 dB short periods of time (electrimies by thempaid off of the sys		**
Secondary match correction available for improved low insertion loss measurements Full 2-port (up to two at once), 3-port and 4-port calibrations 1 path/2 port Frequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Merged Calibration Merged Calibration Merger multiple calibration methods over bands of frequency points. Note that merge does not need to be used for broadband coaxid (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Use to make the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Use complex load models. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Adapter Removal Calibration Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and telectrical length of the user's setup. Characterizes and "removes's an adapter that is used during calibration that will not be used for subsequence of the measurements for accurate measurements for accurate measurements. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Prover Calibrations Flat Power Calibrations Flat Power Calibrations A the power calibration frequency in the calibration power as read by the power meter, to within -0.1 dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Between the power admits and the target calibration p		
Full 2-port (up to two at once), 3-port and 4-port calibrations 1 path/2 port Frequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports)		•
1 path/2 port Frequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Merged Calibration Merge multiple calibration methods over bands of frequency points. Note that merge does not need to be used for broadband coaxial (SQLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and electrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subseque device measurements; for accurate measurement of non-insertable devices. Dispersion Compensation Power Power Meter Correction Power Meter Correction Prover Meter Correction Prover Meter Correction Flat Power Calibrations Afl ap power calibrations Linear Power Calibrations Linear Power Calibrations Afl ap power calibration in frequency sweep mode) is available at a user-selectable power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range. An adapter may be required to the from multifrequency gain compression, Aginet 1-378 (or equivalment) for internal source. The flat power correct ion is applied to other power levels directly as an offset. Multiple power meter for multifrequency gain compression, Note: Usage of the MaX4500A series sonor requires a dual USB Type		Secondary match correction available for improved low insertion loss measurements
Frequency response (transmission or reflection, any path combination) Reflection only (1, 2, 3, or 4 ports) Merged Calibration Merge multiple calibration methods over bands of frequency points. Note that merge does not need to be used for broadband coaxial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anritsu calibration kits USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and telectrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence and evice measurements, for accurate measurement of non-insertable devices. Complex Meter Correction Dispersion Compensation Power Different power meter calibrations are available to enhance power accuracy at the desired reference pla must be accuracy of the calibration power, as read by the power meter, to within -0.1 dis visit in the power adults of the calibration power, as read by the power meter on within -0.1 dis visit in the power adults of the power meter on the power necessary of the calibration power, as read by the power meter on within -0.1 dis power power on the power necessary of the calibration power as read by the power meter on within -0.1 dis power power on the power necessary of the calibration power as read by the power meter on within -0.1 dis power power on the power necessary of the calibration power as read by the power necessary of the calibration power as read by the power necessary of the calibration power p	Correction Models	
Merged Calibration Merge multiple calibration enhods over bands of frequency points. Note that merge does not need to be used for broadband coaxial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Interpolation Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and telectrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence measurements, for accurate measurement of non-insertable devices. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Interpolation and the degradation is dependent on the power meter, to within -0.1 dB short periods of time (determined by thermal drift of the system and the power meter, to within -0.1 dB short periods of time (determined by thermal drift of the system and the power meter, The absolute accuracy of the calibrated power will be dependent on the power meter, The absolute of the power calibrations are available to enhance power accuracy at the desired reference pla frequency and supplications are performed by thermal drift of the system and the power meter, The absolute of the power meter of the power meter of the internal source. The flat power correction is applied to other power device of the internal source. The flat power correction is applied to other power levels of the internal source. The flat power correct		·
Merged Calibration Merge multiple calibration methods over bands of frequency points. Note that merge does not need to be used for broadband coavial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and telectrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequencies and removes an adapter that is used during calibration that will not be used for subsequencies and removes an adapter that is used during calibration that will not be used for subsequencies and removes an adapter that is used during calibration that will not be used for subsequency and the composer of accurate measurement of non-insertable devices. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla short periods of time (determined by the thread inflict of the system and the power meter, to within -0.1 dis short periods of time (determined by the thread inflict of the system and the power meter, to within -0.1 dis short periods of time (determined by the thread inflict of the system and the power meter, to within -0.1 dis short periods of time (determined by the power and the power meter, to within -0.1 dis short periods of time (dete		
Note that merge does not need to be used for broadband coavial (SOLT/R-SSST/R) 1 mm or 0.8 mm calibrations using Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and telectrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequencies and the user's setup. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla short periods of time (determined by thermal drift of the system and the subsolute accuracy of the calibration of the system and the system and the subsolute accuracy of the calibration of the internal source. The flat power meter, 1 has absolute accuracy of the calibration is performed using an enternal power meter flat power correction is applied to other requency range. An adapter may be required to the 1mm module test port. Aliana power calibration is performed over a range of power levels for use in power sweep mode and inperformed at a specified frequency or frequency range (for multifrequency pain compression). Note: Usage of the MA24500A, MA2430A, MA24330A, MA24330A		Reflection only (1, 2, 3, 01 4 ports)
Coefficients for Calibration Standards Use the Anritsu calibration kits. These can be done as one unified calibration. Coefficients for Calibration Standards Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and to electrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence measurements, for accurate measurement of non-insertable devices. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference plants accuracy of the calibrated power will be dependent on the power meter, in the absolute accuracy of the calibrated power will be dependent on the power meter. The absolute accuracy of the calibration (when in frequency sweep mode) is available to enhance power levels directly as an offset. Multiple power meters/sensors mad the power revelor, if the power levels directly as an offset. Multiple power meters/sensors are at user-selectable power levels directly as an offset. Multiple power meters/sensors in the new revelops of the calibration is performed over a range of power levels for use in power sweep mode and in previous previous devices are performed using an external power meter/sensor in language of power levels for use in power sweep mode and in previous pre	Merged Calibration	
Coefficients for Calibration Standards Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Interpolation Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and to electrical length of the user's setup. Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence device measurements, for accurate measurement of non-insertable devices. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla The source power will match the target calibration power, as read by the power meter, to within -0.1 d8 short periods of time (determined by thermal drift of the system and the power meter, 1. The absolute accuracy of the calibrated power will be dependent on the power meter and sensor used. Flat Power Calibrations Al hat power calibration when in frequency sweep mode jis available at a user-selectable power level, if within the power adjustment range of the internal source. The flat power correction is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency arge, An adapter may be required to the 1mm module MUL438A, ML2481B, ML2491A, Aglient 437B or equivalent, Keysight N191XFPM Series, Shode and Schwarz NRP2 meter with a broadband 10 or equivalent, Keysight N191XVEPM Series, Shode and Schwarz NRP2 meter with a broadband 10 or equivalent, Keysight N191XVEPM Series, Shode and Schwarz NRP2 meter with a broadband 10 or equivalent, Keysi		
Use the Anritsu calibration kit USB Memory Device to load kit coefficients and characterization files. Enter manual coefficients into user-defined locations. Use complex load models. Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω. Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and tielectrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence measurement of non-insertable devices. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla The source power will match the target calibration power, as read by the power meter, to within -0.1 dB short periods of time (determined by thermal drift of the system and the power meter). The absolute accuracy of the calibrated power will be dependent on the power meter and sensor used. A flat power calibrations A flat power calibration when in frequency sweep mode) is available at a user-selectable power level within the power adjustment range of the internal source. The flat power correction is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range of the internal source. The Deceded depending on the frequency range and a performed using an external power meter (Anritsu ML2438A, ML2498A, Algient 4378 for equivalently, Keysight N191XA/EPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Float DPM power meter (Anritsu ML2438A, ML2438A, ML2498A, ML24350A, ML		Calibrations using Afficed Calibration Rics. These can be done as one unified Calibration.
Reference Impedance	Coefficients for Calibration Stand	
Use complex load models.		•
Reference Impedance Modify the reference impedance from 50 Ω to any impedance greater than 0 Ω.		
Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration frequencies and that degradation is dependent on the frequency step size in the initial calibration and the electrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence devices. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference planed the source power will match the target calibration power, as read by the power meter, to within ~0.1 dB short periods of time (determined by thermal drift of the system and the power meter). The absolute accuracy of the calibrated power will be dependent on the power meter and sensor used. A flat power Calibrations Flat Power Calibrations Linear Power Calibrations Linear Power Calibrations External Power Meter External Power Meter A linear power calibration (when in frequency sweep mode) is available at a user-selectable power level, if within the power adjustment range of the internal source procrection is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range. An adapter may be required to the 1 mmodule test port requency range. An adapter may be required to the 1 mmodule test port of power adjustment range of the internal source, range of power levels for use in power sweep mode and in performed at a specified frequency or frequency range (for multifrequency gain compression). External Power Meter A linear power calibration is performed over a range of power levels for use in power sweep mode and in performed at a specified frequency or frequency range for multifrequency gain compression). Both calibrations are performed using an external power meter (Anritsu ML2438A, ML24		Use complex load models.
frequencies and that degradation is dependent on the frequency step size in the initial calibration and the electrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence device measurements; for accurate measurement of non-insertable devices. Dispersion Compensation Power Power Meter Correction Power Meter Correction Flat Power Calibrations A flat power calibration so of time (determined by thermal drift of the system and the power meter, to within –0.1 dB short periods of time (determined by thermal drift of the system and the power meter, the absolute accuracy of the calibrated power will be dependent on the power meter and sensor used. A flat power Calibrations Linear Power Calibrations External Power Meter External Power Meter External Power Meter External Power Meter A linear power calibration is performed over a range of power levels for use in power sweep mode and in performed at a specified frequency or frequency range (for multifrequency gain compression). Both calibrations are performed using an external power meter (Anritsu ML2438A, ML248xA, ML249xA, Agilent 437B (or equivalent), keysight N191XA/FPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter be Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24106A, MA24108A, MA24126A, MA24208A, MA24228A, MA24228A, MA24228A, MA24238A, ML248xB, MA2430A, MA24350A, wha2450A, or equivalent), keysight N191XA/FPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor or Elva DPM power meter) connected to a USB power sen (Anritsu MA24106A, MA24106A, MA24106A, MA24106A, MA24126A, MA24208A, MA24218A, MA24238A, ML2438A, ML249XA, MA24350A, wha2450A, or equivalent, keysight N191XA/FPM Series, Rhode and Schwarz NRP2 meter with a Noabband series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding/De-embedding De-embedding De-embedding sequipped wit	Reference Impedance	Modify the reference impedance from 50 Ω to any impedance greater than 0 $\Omega.$
frequencies and that degradation is dependent on the frequency step size in the initial calibration and trelectrical length of the user's setup. Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence device measurements; for accurate measurement of non-insertable devices. Dispersion Compensation Power Power Meter Correction Power Meter Correction Flat Power Calibrations A flat power calibration sare available to enhance power accuracy at the desired reference plathes oncy periods of time (determined by thermal drift of the system and the power meter, to within -0.1 dB short periods of time (determined by thermal drift of the system and the power meter, the absolute accuracy of the calibrated power will be dependent on the power meter and sensor used. A flat power Calibrations A flat power calibration (when in frequency sweep mode) is available at a user-selectable power level, if within the power adjustment range of the internal source. The flat power correction is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range. An adapter may be required to the 1 mmodule test port. Linear Power Meter External Power Meter External Power Meter External Power Meter A linear power calibration is performed over a range of power levels for use in power sweep mode and i performed as a specified frequency on frequency range (for multifrequency gain compression). Both calibrations are performed using an external power meter (Anritsu ML2438A, ML248xA, ML249xA, Aglient 437B (or equivalent), keysight N191XA/FPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensory or Elva DPM power meter) ownected to a USB power sen (Anritsu MA24106A, MA24108A, MA24118A, MA24126A, MA24208A, MA24218A, MA2430A, MA	Interpolation	Allows interpolation between calibration frequency points. Accuracy will be reduced at non-calibration
Adapter Removal Calibration Characterizes and "removes" an adapter that is used during calibration that will not be used for subsequence device measurements for accurate measurement of non-insertable devices. Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla The source power will match the target calibration power, as read by the power meter, to within ~0.1 dB short periods of time (determined by thermal drift of the system and the power meter). The absolute accuracy of the calibrated power will be dependent on the power meter and sensor used. A flat power Calibrations within the power adjusted power will be dependent on the power meter and sensor used. A flat power calibration (when in frequency sweep mode) is available at a user-selectable power level, if within the power adjustation is performed over a range of power levels for use in power sweep mode not be required to the 1mm module test port. A linear power Calibrations External Power Meter A linear power calibration is performed over a range of power levels for use in power sweep mode and in performed at a specified frequency or frequency range (for multifrequency gain compression). Both calibrations are performed using an external power meter (Anritsu ML2438A, ML248xB, ML249xA, Agilent 437B (or equivalent), Keysight N191XA/EPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24106A, MA24106A, MA24208A, MA24330A, MA24330A, MA243406A, MA244106A, MA24106A, MA24106A, MA24106A, MA24208A, MA24330A, MA24330A, MA243406A, MA24307A, or Erickson PM5x meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A fina cable to supply needed current draw. Because of certain bandwidth requirements,		frequencies and that degradation is dependent on the frequency step size in the initial calibration and the
Dispersion Compensation Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip. Power Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla The source power will match the target calibration power, as read by the power meter, the absolute accuracy of the calibrated power will be dependent on the power meter). The absolute accuracy of the calibrated power will be dependent on the power meter and sensor used. A flat power Calibrations A flat power calibration (when in frequency sweep mode) is available at a user-selectable power level, if within the power adjustment range of the internal source. The flat power correction is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range. An adapter may be required to the mm module test port. Linear Power Calibrations External Power Meter A linear power calibration is performed over a range of power levels for use in power sweep mode and in performed at a specified frequency or frequency range (for multifrequency gain compression). Both calibrations are performed using an external power meter (Anritsu ML2498A, ML248NA, M2418A, M2418A, M24218A, M2421		electrical length of the user's setup.
Power Meter Correction Power Meter Correction Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla The source power will match the target calibration power, as read by the power meter, to within ~0.1 dB short periods of time (determined by thermal drift of the system and the power meter, to within ~0.1 dB short periods of time (determined by thermal drift of the system and the power meter, to within ~0.1 dB short periods of time (determined by thermal drift of the system and the power meter). The absolute accuracy of the calibrated power will be dependent on the power meter and sensor used. A flat power Calibrations A flat power calibration (when in frequency sweep mode) is available at a user-selectable power levels, if within the power adjustment range of the internal source. The flat power correction is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range. An adapter may be required to the 1mm module test port. A linear power calibration is performed over a range of power levels for use in power sweep mode and in performed at a specified frequency or frequency range (for multifrequency gain compression). Both calibrations are performed using an external power meter (Anritsu ML2438A, ML248xB, Al249xA, Agilent 437B (or equivalent), Keysight N191XA/EPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24108A, MA24108A, MA24108A, MA24218A, MA24208A, MA24218A, MA24330A, MA24350A, MA24530A, MA24550A, Aga24510A, or Erds510A, Erds510A, or Erds510A, Decembed 11 and Erds510A, Decembed 11 and Erds510A, Decembed 11 and Erds510A, Decembed 1	Adapter Removal Calibration	Characterizes and "removes" an adapter that is used during calibration that will not be used for subseque device measurements; for accurate measurement of non-insertable devices.
Power Meter Correction Different power meter calibrations are available to enhance power accuracy at the desired reference pla The source power will match the target calibration power, as read by the power meter, to within ~0.1 dB short periods of time (determined by thermal drift of the system and the power meter). The absolute accuracy of the calibrated power will be dependent on the power meter and sensor used. A flat power calibration within the power adjustment range of the internal source. The flat power correction is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range. An adapter may be required to the Imm module test port. External Power Meter External Power Meter External Power Meter Both calibrations are performed using an external power meter (Anritsu ML2438A, ML249xA, Aglient 437B (or equivalent), Keysight N194XPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24350A, Ava24108A, MA24136A, MA24216A, MA24236A, MA24350A, MA24350A, MA24350A, MA24350A, Ava2450A,	Dispersion Compensation	Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip.
The source power will match the target calibration power, as read by the power meter, to within ~0.1 dB short periods of time (determined by thermal drift of the system and the power meter). The absolute accuracy of the calibrated power will be dependent on the power meter and sensor used. A flat power Calibrations A flat power calibration (when in frequency sweep mode) is available at a user-selectable power level, if within the power adjustment range of the internal source. The flat power correction is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range. An adapter may be required to the 1mm module test port. A linear power Calibrations External Power Meter External Power Meter External Power Meter External Power Meter Both calibrations are performed using an external power meter (Anritsu ML2438A, ML249xA, Agilent 437B (or equivalent), Keysight N191XA/EPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24108A, MA24118A, MA24126A, MA24208A, MA24218A, MA2433A, MA24350A, MA24350A, or Erickson PMSx meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding De-embedding The MS4640B is equipped with an Embedding/De-embedding system. De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (S2p files) from measurements. Multiple Networks Multiple Networks An extraction utility is part of this package that allows the easier computation of de-embedding files base and of the power m	Power	
Short periods of time (determined by thermal drift of the system and the power meter). The absolute accuracy of the calibrated power will be dependent on the power and sensor used. A flat power calibrations within the power adjustment range of the internal source. The flat power correction is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range. An adapter may be required to the 1mm module test port. A linear Power Calibrations External Power Meter External Power Meter External Power Meter A linear power calibration is performed over a range of power levels for use in power sweep mode and in performed at a specified frequency or frequency range (for multifrequency gain compression). Both calibrations are performed using an external power meter (Anritsu ML2438A, ML249xA, Agilent 437B (or equivalent), Keysight NIJA/EPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24106A, MA24108A, MA24118A, MA24126A, MA24208A, MA24218A, MA24330A, MA24350A, MA24500A, or MA24510A, or Erickson PM5x meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding/De-embedding De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by 5-parameters (s2p files) from measurements. Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks A nextraction utility is part of this package that allo	Power Meter Correction	Different power meter calibrations are available to enhance power accuracy at the desired reference plan
accuracy of the calibrated power will be dependent on the power meter and sensor used. A flat power Calibration (when in frequency sweep mode) is available at a user-selectable power level, if within the power adjustment range of the internal source. The flat power correction is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range. An adapter may be required to the 1mm module test port. A linear power Calibrations External Power Meter Both calibrations are performed using an external power meter (Anritsu ML2438A, ML248xB, ML249xA, Agilent 437B (or equivalent), Keysight N191XA/FPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24510A, MA24510A, or Erickson PM5x meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding De-embedding The MS4640B is equipped with an Embedding/De-embedding system. De-embedding seperally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files base		The source power will match the target calibration power, as read by the power meter, to within ~0.1 dB f
within the power adjustment range of the internal source. The flat power correction is applied to other power levels directly as an offset. Multiple power meters/sensors may be needed depending on the frequency range. An adapter may be required to the 1mm module test port. A linear power Calibrations performed over a range of power levels for use in power sweep mode and in performed at a specified frequency or frequency range (for multifrequency gain compression). External Power Meter Bott Calibrations are performed using an external power meter (Anritsu ML2438A, ML248xB, ML249xA, Agilent 437B (or equivalent), Keysight N191XA/EPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24108A, MA24118A, MA24126A, MA24208A, MA24218A, MA24330A, MA24350A, MA24350A, MA24500A, series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding/De-embedding De-embedding De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files based to the power and the power area of the power area of the power and the power area of the power area of the power area of the power area of the power and the power area of the power ar		
Linear Power Calibrations Linear Power Calibrations External Power Meter Both calibrations are performed using an external power meter (Anritsu ML2438A, ML248xB, ML249xA, Agilent 437B (or equivalent), Keysight N191XA/EPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24108A, MA24118A, MA24126A, MA24208A, MA24218B, MA24330A, MA24330A, MA24350A, MA24350A, MA24507A, or MA24510A, or Erickson PM5x meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding De-embedding The MS4640B is equipped with an Embedding/De-embedding system. De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files base	Flat Power Calibrations	A flat power calibration (when in frequency sweep mode) is available at a user-selectable power level, if it
External Power Calibrations External Power Meter A linear power calibration is performed over a range of power levels for use in power sweep mode and in performed over a range of power levels for use in power sweep mode and is performed to feve in power meter (Arritsu ML2438A, ML249xA, Agilent 437B (External Power Meter With a UL249xA, Agilent 437B (External Power MA2450A, MA24108A, MA241108A, MA24108A, MA241108A, MA241108A, MA241108A, MA241108A, MA241108A		
Linear Power Calibrations A linear power calibration is performed over a range of power levels for use in power sweep mode and i performed at a specified frequency or frequency range (for multifrequency gain compression). Both calibrations are performed using an external power meter (Anritsu ML2438A, ML248xB, ML249xA, Agilent 437B (or equivalent), Keysight N191XA/EPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24108A, MA24118A, MA24126A, MA24208A, MA24218A, MA24330A, MA2430A, MA24350A, MA2450A, or MA24510A, or Erickson PM5x meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding/De-embedding De-embedding		
External Power Meter Both calibrations are performed using an external power meter (Anritsu ML2438A, ML248xB, ML249xA, Agilent 437B (or equivalent), Keysight N191XA/EPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24108A, MA24118A, MA24126A, MA24208A, MA24218A, MA24330A, MA24350A, MA24507A, or MA24510A, or Erickson PM5x meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding/De-embedding De-embedding Sequipped with an Embedding/De-embedding system. De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files base	L'anna Barra Callibration	
Agilent 437B (or equivalent), Keysight N191XA/EPM Series, Rhode and Schwarz NRP2 meter with a broadband 110 GHz sensor, or Elwa DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24108A, MA24118A, MA24126A, MA24208A, MA24218A, MA24330A, MA24340A, MA24350A, MA24507A, or MA24510A, or Erickson PM5x meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. The MS4640B is equipped with an Embedding/De-embedding system. De-embedding De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files base	Linear Power Calibrations	
broadband 110 GHz sensor, or Élva DPM power meter) over the Dedicated GPIB port, or a USB power sen (Anritsu MA24106A, MA24108A, MA24118A, MA24126A, MA24218A, MA24218A, MA2430A, MA2430A, MA2450A, MA2450A, MA2450A, MA2450A, or MA2450A, or Erickson PM5x meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding/De-embedding De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Embedding Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files base	External Power Meter	Both calibrations are performed using an external power meter (Anritsu ML2438A, ML248xB, ML249xA,
(Anritsu MA24106A, MA24108A, MA24118A, MA24126A, MA24208A, MA24218A, MA24330A, MA24340A, MA24350A, MA24350A, MA24507A, or MA24510A, or Erickson PM5x meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding De-embedding De-embedding De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files based in the package that allows the easier computation of de-embedding files based in the package that allows the easier computation of de-embedding files based in the package that allows the easier computation of de-embedding files based in the package that allows the easier computation of de-embedding files based in the package that allows the easier computation of de-embedding files based in the package that allows the easier computation of de-embedding files based in the package that allows the easier computation of de-embedding files based in the package that allows the easier computation of de-embedding files based in the package that allows the easier computation of de-embedding files based in the package that allows the easier computation of the package that allows the easier computation of the package that allows the easier computation of the packag		
MA24350A, MA24507A, or MA24510A, or Erickson PM5x meter) connected to a USB port. Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding De-embedding De-embedding De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files base		
Note: Usage of the MA24500A series sensor requires a dual USB Type A male to single USB Type A fema cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding De-embedding De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Embedding Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files base		
cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. The MS4640B is equipped with an Embedding/De-embedding system. De-embedding De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Embedding Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files base		
only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500 series of sensors (when used with VectorStar) may be degraded below 1 MHz. Embedding/De-embedding De-embedding De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Embedding Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. An extraction utility is part of this package that allows the easier computation of de-embedding files base		cable to supply needed current draw. Because of certain bandwidth requirements, the MA24500A series of certain bandwidth requirements.
Embedding/De-embedding De-embedding De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Embedding Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. Extraction Utility An extraction utility is part of this package that allows the easier computation of de-embedding files base		only be used for power calibrations above nominally -35 dBm on VectorStar. Accuracy with the MA24500
De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Embedding Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. Extraction Utility An extraction utility is part of this package that allows the easier computation of de-embedding files base		series of sensors (when used with VectorStar) may be degraded below 1 MHz.
De-embedding is generally used for removal of test fixture contributions, modeled networks and other networks described by S-parameters (s2p files) from measurements. Embedding Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. Extraction Utility An extraction utility is part of this package that allows the easier computation of de-embedding files base	Embedding/De-embedding	The MS4640B is equipped with an Embedding/De-embedding system.
networks described by S-parameters (s2p files) from measurements. Embedding Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. Extraction Utility An extraction utility is part of this package that allows the easier computation of de-embedding files base	_	
designs or simply adding effects of a known structure to a measurement. Multiple Networks Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily. Extraction Utility An extraction utility is part of this package that allows the easier computation of de-embedding files base		networks described by S-parameters (s2p files) from measurements.
handled easily. Extraction Utility An extraction utility is part of this package that allows the easier computation of de-embedding files bas	Embedding	
Extraction Utility An extraction utility is part of this package that allows the easier computation of de-embedding files bas		
	Multiple Networks	handled easily.

Mechanical Calibration/Verification Kits

0.8 mm Calibration/Verification Kit, 3659

Provides 12-term SOLT or Triple Offset Short calibrations, for 0.8 mm devices, and two verification standards.



3659 0.8 mm Calibration/Verification Kit providing 12-Term SOLT or SSST calibrations and two verification standards.

3659 Cal Kit Contains:	Additional Information (Typical)	Quantity	Part Number
0.8 mm Calibration / Verification Kit			3659
Offset Short 0.8 mm (male)	Offset: 1.200 mm	1	23.850-1
Offset Short 0.8 mm (male)	Offset: 1.630 mm	1	23.850-2
Offset Short 0.8 mm (male)	Offset: 2.060 mm	1	23.850-3
Offset Short 0.8 mm (female)	Offset: 1.200 mm	1	23.8F50-1
Offset Short 0.8 mm (female)	Offset: 1.630 mm	1	23.8F50-2
Offset Short 0.8 mm (female)	Offset: 2.060 mm	1	23.8F50-3
Open 0.8 mm (male)	Offset: 1.200 mm	1	24.850
Open 0.8 mm (female)	Offset: 1.200 mm	1	24.8F50
Fixed Termination 0.8 mm (male)		1	28.850
Fixed Termination 0.8 mm (female)		1	28.8F50
Adapter, 1.0 mm (male) to 0.8 mm (male) Connector		1	33W.850
Adapter, 1.0 mm (male) to 0.8 mm (female) Connector		1	33W.8F50
Adapter, 1.0 mm (female) to 0.8 mm (male) Connector		1	33WF.850
Adapter, 1.0 mm (female) to 0.8 mm (female) Connector		1	33WF.8F50
Adapter, 0.8 mm (male) to 0.8 mm (female)		1	33.8.8F50
Adapter, 0.8 mm (male) to 0.8 mm (male)		1	33.8.850
Adapter, 0.8 mm (female) to 0.8 mm (female)		1	33.8F.8F50
Stepped Impedance Thruline, 0.8 mm (male - female)	Verification Device	1	18.8.8F50-1B
50 Ohm matched Thruline, 0.8 mm (male - female)	Verification Device	1	18.8.8F50-1
Torque Wrench	6 mm, 5.4 N·cm (4 lbf·in)	1	01-524
Open-ended Wrench	6 mm / 7 mm	1	01-525
Coefficients for standards	On USB Memory Device	1	-

Test Port Cables

Description	Frequency Range	Impedance	Length (cm)	Insertion Loss (dB)	Return Loss (dB)	Part Number
2 0001. p11011	90	2peaaee	10	1.74	≥ 14	3671W1-50-
1.0 mm (male)	DC to 110 GHz	50 Ω	13	2.23	≥ 14	3671W1-50
1.0 mm (female)	(125 GHz)		16	2.74	≥ 14	3671W1-50
0.8 mm (male) 0.8 mm (female)	DC to 145 GHz	50 Ω	10	2	≥ 12	3670.850-
0.8 mm (male) 0.8 mm (female)	DC to 145 GHz	50 Ω	16	3.5	≥ 12	3670.850-



3670.850-1, 3670.850-2, 0.8 mm Test Port Cables

Precision Adapters, Attenuators, and Other ComponentsAnritsu offers a complete line of precision adapters and attenuators. For more information, please visit our web site at www.anritsu.com.



Ordering Information
The ME7838D4 4-Port Broadband/Millimeter-Wave VNA System provides single sweep coverage from 70 kHz to 145 GHz and consists of the following standard components and optional accessories described in the sections below:

ME7838D4 4-Port Broadb	and System, 70 kHz to 145 GHz	
Action	Part Number and Description	Additional Information
	MS4647B, 70 kHz to 70 GHz VNA	
	MS4640B-007, Receiver Offset	
	MS4640B-070, 70 kHz frequency coverage	
Order the base VectorStar model	MN4697C, 4-Port Test Set	
with the listed components and	3739C, Broadband Test Set with 36 inch interface cables	
options:	3736B Broadband/Millimeter-Wave Test Set	
	MA25300A, Millimeter-Wave Module, 4 each	
	806-209-R, 1.85mm coaxial VNA RF cables, 36 in, (m-f) 4 each	
	ME7838D4-SS020, On-site system assembly and verification	
	MS4647B-081, MS4647B with ME7838D4 system option and	MS4647B-085 is ordered when Option 31 is
	Option 51, or 61, or 62:	included
Include the following:	MS4647B-051 – External VNA Loops	
	MS4647B-061 – Active Measurement Suite, 2 Attenuators	
	MS4647B-062 – Active Measurement Suite, 4 Attenuators	
	MS4640B-070 – for 70 kHz operation in base VNA	
	MS4640B-002 – for Time Domain	
	MS4647B-031 – Dual Source Architecture	MS4647B-031 requires Option 85
	MS4640B-035 – IF Digitizer	
	MS4640B-041 – Noise Figure	
Add options if desired	MS4640B-042 – PulseView™	
	MS4640B-043 – DifferentialView™	
	MS4640B-048 – Differential Noise Figure	
	MS4640B-049 – Spectrum Analysis	
		For other available options, see "ME7838D4 Broadband/Millimeter-Wave System Options"
Calibration Options	ME7838D4-098 - Standard Calibration, ISO 17025 compliant, without data	
Calibration Options	ME7838D4-099 - Premium Calibration, ISO 17025 compliant, with data	

ME7838D4 4-Port Waveguide-Band System to 110 GHz – 3744A-EE or 3744A-EW mmWave Modules

Configurator for ME7838D4 Millimeter-Wave System using 3744A-EE or 3744A-EW mmWave Modules:

Part Number and Description	Additional Information
MS4644B VNA, 10 MHz to 40 GHz	MS4644B-085 is ordered when Option 31 is included.
MS4640B-007, Receiver Offset	
MS4644B-083 or MS4644B-085	
MS4647B VNA, 10 MHz to 70 GHz	MS4647B-085 is ordered when Option 31 is included.
MS4647B-007, Receiver Offset	
MS4647B-081 or MS4647B-085	
MN4697C, 4-Port Test Set	
3736B Broadband/Millimeter-Wave Test Set	
3739C Broadband/Millimeter-Wave Test Set	
3744A-EE, 56 GHz to 94 GHz Extended E Band module, 4 each	
3744A-EW, 65 GHz to 110 GHz Extended W Band module, 4 each	
Option 51, or 61, or 62:	
MS464xB-051 – External VNA Loops	ME7838D4 requires Option 51, or 61, or 62
MS464xB-061 – Active Measurement Suite, 2 Attenuators	
MS464xB-062 – Active Measurement Suite, 4 Attenuators	
MS4640B-070 – for 70 kHz operation in base VNA	
MS4640B-002 – for Time Domain	
MS464xB-031 – Dual Source Architecture	MS464xB-031 requires Option 85
MS4640B-035 – IF Digitizer	
MS4640B-041 – Noise Figure	
MS4640B-042 – PulseView™	
MS4640B-043 – DifferentialView™	
MS4640B-048 – Differential Noise Figure	
MS4640B-049 – Spectrum Analysis	
	For other available options, see "ME7838D4 Broadband/Millimeter-Wave System Options"
35WR12WF-EE – Precision Waveguide to Coax Adapter Kit, 56 GHz to 94 GHz, WR-12 to W1 (f)	
35WR10WF-EW – Precision Waveguide to Coax Adapter Kit, 65 GHz to 110 GHz, WR-10 to W1 (f)	
	MS4644B VNA, 10 MHz to 40 GHz MS4640B-007, Receiver Offset MS4644B-083 or MS4644B-085 MS4647B VNA, 10 MHz to 70 GHz MS4647B-007, Receiver Offset MS4647B-007, Receiver Offset MS4647B-081 or MS4647B-085 MN4697C, 4-Port Test Set 3736B Broadband/Millimeter-Wave Test Set 3739C Broadband/Millimeter-Wave Test Set 3744A-EE, 56 GHz to 94 GHz Extended E Band module, 4 each 3744A-EW, 65 GHz to 110 GHz Extended W Band module, 4 each Option 51, or 61, or 62: MS464xB-051 − External VNA Loops MS464xB-061 − Active Measurement Suite, 2 Attenuators MS464xB-062 − Active Measurement Suite, 4 Attenuators MS4640B-070 − for 70 kHz operation in base VNA MS4640B-002 − for Time Domain MS464xB-031 − Dual Source Architecture MS4640B-041 − Noise Figure MS4640B-042 − PulseView™ MS4640B-043 − DifferentialView™ MS4640B-048 − Differential Noise Figure MS4640B-049 − Spectrum Analysis 35WR12WF-EE − Precision Waveguide to Coax Adapter Kit, 56 GHz to 94 GHz, WR-12 to W1 (f) 35WR10WF-EW − Precision Waveguide to Coax Adapter Kit, 65

ME7838D4 4-Port Waveguide-Band System – VDI mmWave Modules

ME7838D4 4-Port Waveguide-Band System using VDI Millimeter-Wave modules:

Action	Part Number and Description	Additional Information
Choose and order one of the three base VectorStar models with options listed:	MS4642B VNA, 10 MHz to 20 GHz	MS4642B-061 includes Active Device
	MS4640B-007, Receiver Offset	Measurements, with 2 Step Attenuators
	MS4642B-061 or MS4642B-062	MS4642B-062 includes Active Device
	MS4642B-083	Measurements, with 4 Step Attenuators
		MS4642B-085 is ordered when Option 31 is included.
	MS4644B VNA, 10 MHz to 40 GHz	
	MS4640B-007, Receiver Offset	MS4644B-085 is ordered when Option 31 is included.
	MS4644B-083	included.
	MS4647B VNA, 10 MHz to 70 GHz	MC4C47D 005 is a short black Outline 24 is
	MS4640B-007, Receiver Offset	MS4647B-085 is ordered when Option 31 is included.
	MS4647B-081	medaca.
	MN469xC, 4-port Test Set	
	3739C Broadband/Millimeter-Wave Test Set	
Order:	3736B Broadband/Millimeter-Wave Test Set	
	SM6537 Interface Cables (4) for VDI mmWave Modules	Does not include DC cable. DC supply is provided by mmWave module power supply.
Choose and order one of the two appropriate millimeter-wave module combinations:	4 each TxRx transmission and reflection millimeter-wave modules	Choose appropriate VDI modules. Contact Anritsu Company for ordering information.
For MS4644B or MS4647B, order:	Option 51, or 61, or 62:	
	MS464xB-051 – External VNA Loops	ME7020D4 i.v. O.vi E4 64 62
	MS464xB-061 – Active Measurement Suite, 2 Attenuators	ME7838D4 requires Option 51, or 61, or 62
	MS464xB-062 – Active Measurement Suite, 4 Attenuators	
Add options if desired:	MS4640B-070 – for 70 kHz operation in base VNA	
	MS4640B-002 – for Time Domain	
	MS464xB-031 – Dual Source Architecture	MS464xB-031 requires Option 85
	MS4640B-035 – IF Digitizer	
	MS4640B-041 – Noise Figure	
	MS4640B-042 – PulseView™	
	MS4640B-043 – DifferentialView™	
	MS4640B-048 – Differential Noise Figure	
	MS4640B-049 – Spectrum Analysis	
		For other available options, see "ME7838D4 Broadband/Millimeter-Wave System Options"

Calibration/Verification Kits

3659	0.8 mm Calibration/Verification Kit
3656C	W1 (1 mm) Calibration/Verification Kit
3656C-3	W1 (1 mm) Calibration/Verification Kit, With .s1p Characterization Files
3656C-5	W1 (1 mm) Calibration Kit
3656C-6	W1 (1 mm) Calibration Kit, With .s1p Characterization Files
3655V	WR-15 Waveguide Calibration Kit, Without Sliding Loads
3655V-1	WR-15 Waveguide Calibration Kit, With Sliding Loads
3655E	WR-12 Waveguide Calibration Kit, Without Sliding Loads
3655E-1	WR-12 Waveguide Calibration Kit, With Sliding Loads
3655W	WR-10 Waveguide Calibration Kit, Without Sliding Loads
3655W-1	WR-10 Waveguide Calibration Kit, With Sliding Loads
3650A	SMA/3.5 mm Calibration Kit, Without Sliding Loads
3650A-1	SMA/3.5 mm Calibration Kit, With Sliding Loads
3652A	K Calibration Kit, With Pin Depth Gauge
3652A-2	K Calibration Kit, With No Pin Depth Gauge
3652A-3	K Calibration Kit, With Pin Depth Gauge and .s1p Characterization Files
3652A-4	K Calibration Kit, With .s1p Characterization Files
3654D	V Calibration Kit, With Pin Depth Gauge
3654D-2	V Calibration Kit, With No Pin Depth Gauge
3654D-3	V Calibration Kit, With Pin Depth Gauge and .s1p Characterization Files
3654D-4	V Calibration Kit, With .s1p Characterization Files

External Power Meters/Sensors MI 243xA CW Power Meter, Single Input or Dual Input Recommended Power Sensors: SC7770 MA247xD MA244xD MA248xD MA2400xA ML248xB Wideband Power Meter, Single Input or Dual Input **Recommended Power Sensors:** MA249xA MA2411B ML249xA Pulse Power Meter, Single Input or Dual Input **Recommended Power Sensors:** MA249xA MA2411B MA24106A USB Power Sensor, 50 MHz to 6 GHz MA24108A USB Power Sensor, 10 MHz to 8 GHz MA24118A USB Power Sensor, 10 MHz to 18 GHz USB Power Sensor, 10 MHz to 26 GHz MA24126A MA24330A USB Power Sensor, 10 MHz to 33 GHz MA24340A USB Power Sensor, 10 MHz to 40 GHz MA24350A USB Power Sensor, 10 MHz to 50 GHz MA24507A Power Master™ Frequency Selectable mmWave Power Analyzer, 9 kHz to 70 GHz MA24510A Power Master™ Frequency Selectable mmWave Power Analyzer, 9 kHz to110 GHz Note that usage of the MA24507A or MA24510A Power Master™ sensor requires connection to two USB ports to supply needed current draw. Test Port Cables, Flexible, High Performance 3671W1-50-1 1.0 mm (male) to 1.0 mm (female), 1 each, 10.0 cm (3.9 in) 3671W1-50-2 1.0 mm (male) to 1.0 mm (female), 1 each, 13.0 cm (5.1 in) 3671W1-50-3 1.0 mm (male) to 1.0 mm (female), 1 each, 16.0 cm (6.3 in) 3671KFS50-60 K (female) to 3.5 mm (male) cable, 60 cm (one cable) 3671KFK50-60 K (female) to K (male) cable, 60 cm (one cable) 3671KFK50-100 K (female) to K (male) cable, 1 each, 100 cm (one cable) 3671KFKF50-60 K (female) to K (female) cable, 1 each, 60 cm (once cable) 3671VFV50-60 V (female) to V (male) cable, 1 each, 60 cm (one cable) 3671VFV50-100 V (female) to V (male) cable, 1 each, 100 cm (one cable 3671KFSF50-60 K (female) to 3.5 mm (female) cable, 1 each, 60 cm (one cable) 3671VFVF50-60 V (female) to V (female) cable, 1 each, 60 cm (one cable) 3671VFV50-100 V (female) to V (male) cable, 1 each, 60 cm (one cable) 3670.850-1 0.8 mm (male) to 0.8 mm (female), 1 each, 10.0 cm (3.9 in) 3670.850-2 0.8 mm (male) to 0.8 mm (female), 1 each, 16.0 cm (6.3 in) **Adapters** 0.8-105F 0.8 mm (female) Sparkplug Launcher Connector, DC to 145 GHz 0.8-105M 0.8 mm (male) Sparkplug Launcher Connector, DC to 145 GHz 34WV50 W1 (male) to V (male) Adapter, W1 (1 mm) to V, Coaxial 34WVF50 W1 (male) to V (female) Adapter, W1 (1 mm) to V, Coaxial 34WFV50 W1 (female) to V (male) Adapter, W1 (1 mm) to V, Coaxial 34WFVF50 W1 (female) to V (female) Adapter, W1 (1 mm) to V, Coaxial 33WW50 W1 (male) to W1 (male) Adapter, W1 (1 mm) in-series, Coaxial 33WWF50 W1 (male) to W1 (female) Adapter, W1 (1 mm) in-series, Coaxial 33WFWF50 W1 (female) to W1 (female) Adapter, W1 (1 mm) in-series, Coaxial 35WR10W WR10 to W1 (male) Adapter, W1 (1mm) to WR10 Waveguide 35WR10WF WR10 to W1 (female) Adapter, W1 (1mm) to WR10 Waveguide SC7260 WR12 to W1 (male) Adapter, W1 (1 mm) to WR12 Waveguide SC7442 WR12 to W1 (female) Adapter, W1 (1 mm) to WR12 Waveguide 35WR15V WR15 to V (male) Adapter, V (1.85mm) to WR15 Waveguide 35WR15VF WR15 to V (female) Adapter, V (1.85mm) to WR15 Waveguide For More Information Refer to our Precision RF & Microwave Components Catalog for descriptions of adapters and other components. **Miscellaneous Components** 41W-3 Attenuator, DC to 110 GHz, 0.2 W, 3 dB, W1(m) to W1(f), 50 Ω 41W-6 Attenuator, DC to 110 GHz, 0.2 W, 6 dB, W1(m) to W1(f), 50 Ω 41W-10 Attenuator, DC to 110 GHz, 0.2 W, 10 dB, W1(m) to W1(f), 50 Ω W240A Precision Power Divider, DC to 110 GHz, W1(f) input, W1(f) outputs, 3 resistor, 50 Ω W241A Precision Power Splitter, DC to 110 GHz, W1(m) input, W1(f) outputs, 2 resistor, 50 Ω MN25110A Precision Directional Coupler, 20 GHz to 110 GHz, W1(f) input, W1(f) output, W1(f) coupled port, 50 Ω

Accessories SC8215 Kelvin Bias Tee, low frequency limit: 70 kHz, Max Voltage: 16 VDC, Max Current: 100 mA SC7287 Kelvin Bias Tee, low frequency limit: 100MHz, Max Voltage: 50 VDC, Max Current: 500 mA Triax (male) to SMC (female) Cable, (Inner-shield floating at SMC end), 1.5 m (60 in) long SC8218 two (2) needed per Kelvin Bias Tee SM6494 System floor console (includes larger size writing table) 2100-2-R GPIB cable, 2 m (79 in) long 2100-4-R GPIB cable, 4 m (157 in) long Flexible Coaxial Cable, DC to 70 GHz, 24 in (61 cm), V(m) – V(f), 50Ω, 806-206-R for connecting the VNA and the MA25300A Modules 806-209-R Flexible Coaxial Cable, DC to 70 GHz, 36 in (91.5 cm), V(m) – V(f), 50Ω, for connecting the VNA and the MA25300A Modules 01-201 Torque Wrench (for tightening male devices), 8 mm (5/16 in), 0.9 N·m (8 lbf·in) for SMA, 3.5 mm, 2.4 mm, K, and V connectors 01-202 Universal Test Port Connector Wrench 01-203 Torque Wrench (for tightening the VNA test ports to female devices) 20.6 mm (13/16 in), 0.9 N·m (8 lbf·in) 01-204 Anritsu Stainless Steel Connector Wrench, circular, open-ended for SMA, 3.5 mm, 2.4 mm, K and V connectors 01-504 Torque wrench (for tightening male devices) 6 mm, 0.45 N-m (4 lbf-in) for 1.0 mm and 0.8 mm connectors

Additional Accessories

01-524

and 0.8 mm connectors

0.8 mm to Waveguide adapters available from Flann Microwave Ltd
0.8 mm Infinity probes available from Cascade Microtech

Low profile Torque Wrench (for tightening male devices), 6 mm, 0.45 N-m (4 lbf-in), 126 mm long for 1.0 mm

Contact Anritsu regarding rack mount options www.anritsu.com.

ME7838D4 TDS PN: 11410-01099 Rev. K 33 of 34

Training at Anritsu

Anritsu has designed courses to help you stay up to date with technologies important to your job. For available training courses, visit: www.anritsu.com and search for training and education.

Advancing beyond

United States

Anritsu Americas Sales Company 490 Jarvis Drive, Morgan Hill, CA 95037-2809, U.S.A. Phone: +1-800-Anritsu (1-800-267-4878)

Anritsu Electronics Ltd.

Americas Sales and Support 490 Jarvis Drive, Morgan Hill, CA 95037-2809, U.S.A.

Phone: +1-800-Anritsu (1-800-267-4878)

Anritsu Eletronica Ltda.

Praça Amadeu Amaral, 27 - 1 Andar 01327-010 - Bela Vista - Sao Paulo - SP, Brazil Phone: +55-11-3283-2511 Fax: +55-11-3288-6940

Anritsu Company, S.A. de C.V.

Blvd Miguel de Cervantes Saavedra #169 Piso 1, Col. Granada, Mexico, Ciudad de Mexico, 11520, MEXICO

Phone: +52-55-4169-7104

United Kingdom

Anritsu EMEA Limited

900 Capability Green, Luton, Bedfordshire, LU1 3LU, U.K. Fax: +44-1582-731303

France

Anritsu SA

12 avenue du Québec, Immeuble Goyave, 91140 VILLEBON SUR YVETTE, France Phone: +33-1-60-92-15-50

Germany

Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1, 81829 München, Germany Phone: +49-89-442308-0 Fax: +49-89-442308-55

• Italy

Anritsu S.R.L.

Spaces Eur Arte, Viale dell'Arte 25, 00144 Roma, Italy Phone: +39-6-509-9711

List Revision Date: 20250812

Sweden

Anritsu AB

Kistagången 20 B, 2 tr, 164 40 Kista, Sweden Phone: +46-8-534-707-00

Finland

Technopolis Aviapolis, Teknobulevardi 3-5 (D208.5.), FI-01530 Vantaa, Finland Phone: +358-20-741-8100

Denmark

Anritsu A/S

c/o Regus Winghouse, Ørestads Boulevard 73, 4th floor, 2300 Copenhagen S, Denmark Phone: +45-7211-2200

Spain

Anritsu EMEA Ltd. Representation Office in Spain

Calle Manzanares 4, Primera planta, 28005

Madrid, Spain Phone: +34-91-572-6761

Austria

Anritsu Ptv Ltd

Am Belvedere 10, A-1100 Vienna, Austria Phone: +43-(0)1-717-28-710

United Arab Emirates

Anritsu EMEA Ltd.

Anritsu A/S

Office No. 164, Building 17, Dubai Internet City P. O. Box - 501901, Dubai, United Arab Emirates Phone: +971-4-3758479

India

ANRITSU INDIA PRIVATE LIMITED

6th Floor, Indiqube ETA, No.38/4, Adjacent to EMC2, Doddanekundi, Outer Ring Road, Bengaluru – 560048, India Phone: +91-80-6728-1300 Fax: +91-80-6728-1301

Singapore

ANRITSU PTE LTD

1 Jalan Kilang Timor, #07-04/06 Pacific Tech Centre Singapore 159303 Phone: +65-6282-2400 Fax: +65-6282-2533

Vietnam

ANRITSU COMPANY LIMITED

16th Floor, Peakview Tower, 36 Hoang Cau Street, O Cho Dua Ward, Dong Da District, Hanoi, Vietnam Phone: +84-24-3201-2730 Fax: +84-24-3201-2740

P.R. China (Shanghai)

Anritsu (China) Co., Ltd.

Room 2701-2705, Tower A, New Caohejing International Business Center No. 391 Gui Ping Road Shanghai, 200233, P.R. China Phone: +86-21-6237-0898 Fax: +86-21-6237-0899

• P.R. China (Hong Kong)

ANRITSU COMPANY LIMITED

Unit 1302, 13th Floor, New East Ocean Center, No.9 Science Museum Road, TsimShaTsui East, Kowloon, Hong Kong Phone: +852-2301-4980 Fax: +852-2301-3545

• Japan

Anritsu Corporation

8-5. Tamura-cho, Atsugi-shi, Kanagawa, 243-0016 Japan Phone: +81-46-296-6509 Fax: +81-46-225-8352

South Korea

Anritsu Corporation, Limited 8F, A TOWER, 20, Gwacheondaero 7-qil, Gwacheon-si, Gyeonggi-do, 13840, Republic of Korea Phone: +82-2-6259-7300 Fax: +82-2-6259-7301

Australia

Anritsu Pty. Ltd.

Unit 20, 21-35 Ricketts Road, Mount Waverley, Victoria 3149, Australia Phone: +61-3-9558-8177 Fax: +61-3-9558-8255

ANRITSU COMPANY, INC.

7F. No. 316. Sec. 1. NeiHu Rd., Taipei 114. Taiwan Phone: +886-2-8751-1816 Fax: +886-2-8751-1817